



DIAGRAMMI DELLE PERDITE DI CARICO

Senza Filtro

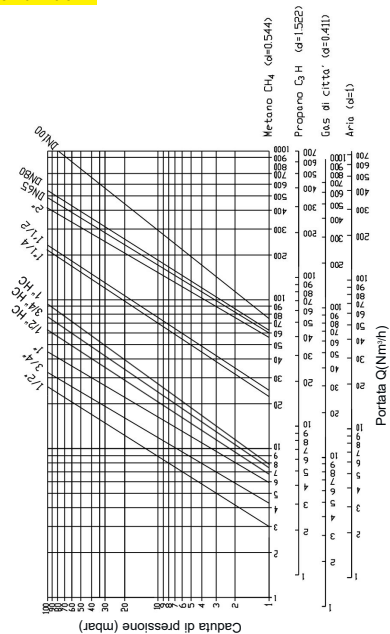

Con Filtro

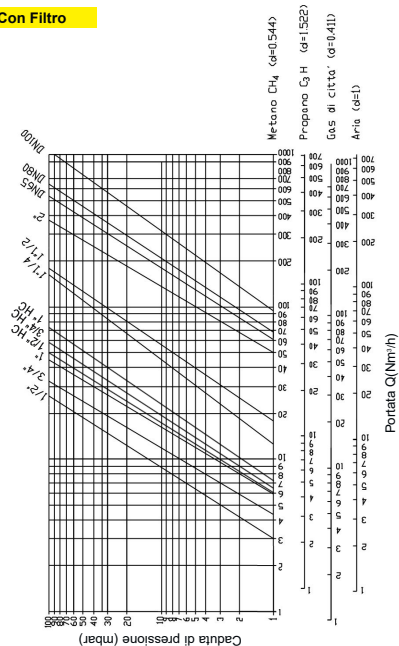


DENSITA'

TIPO DI GAS	DV	TIPO DI GAS	DV
Metano	0,64	Gas di città	0,47
Propano	1,57	Aria	1,0


DIMENSIONI (mm) & PESO (Kg)

DIMENSIONI	A (mm)	B (mm)	C (mm)	D (mm)	PESO (KG)
1/2" - 1/2" HC	154 - 174	100 - 120	115 - 138	76 - 133	0,72 - 1,15
3/4" - 3/4" HC	154 - 174	100 - 120	115 - 138	76 - 133	0,68 - 0,99
1" - 1" HC	154 - 174	100 - 120	115 - 138	76 - 133	0,66 - 0,95
DN25	177,5	114,5	/	180,0	1,46
DN32	273,5	195,5	/	296,0	4,62
DN40	283,0	195,5	/	304,0	4,85
DN50	340,0	245,0	/	338,0	7,8
1" 1/4	243,5	195,5	206,0	194,0	3,140
1" 1/2	243,5	195,5	206,0	194,0	3,060
2" SC	243,5	195,5	206,0	194,0	2,92
2"	301,0	245,0	264,0	235,0	5,8
DN65	440,0	320,0	/	427,0	15,7
DN80	440,0	320,0	/	427,0	15,5
DN100	440,0	320,0	/	427,0	15,0

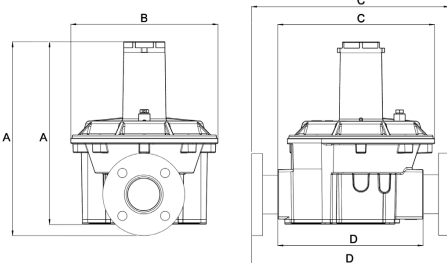


INSTALLAZIONE E POSIZIONAMENTO

Leggere attentamente il foglietto istruzioni prima dell'uso. Questo dispositivo deve essere installato secondo le leggi in vigore. Il GAS GOVERNOR può essere installato in posizione orizzontale e verticale e con la freccia stampata sul corpo rivolta verso l'utenza. Deve essere posizionato nelle vicinanze degli organi di regolazione e preferibilmente all'esterno dell'ambiente in cui è presente l'utenza. **N.B. Installare il GAS GOVERNOR al riparo dagli agenti atmosferici. Se l'utenza non richiede portata, l'otturatore si chiude. La pressione tra l'utenza e il GAS GOVERNOR può aumentare fino al 30% rispetto alla pressione tarata (Pd). Questo fenomeno si chiama (lock-up).**

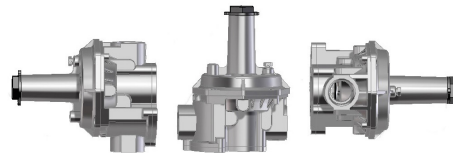

MESSA FUORI SERVIZIO

 Per la "Messa fuori servizio" del GAS GOVERNOR procedere come segue:
 - Svitare il "Tappo superiore".
 - Svitare il "Premi-molla".
 - Sostituire la "Molla" con il distanziale (optional).
 - Riavvitare il "Premi-molla" fine a fine corsa e riposizionare il "Tappo superiore".



DIRETTIVA 2012/19/UE (Rifiuti di Apparecchiature Elettriche ed Elettroniche - RAEE):
 Informazioni agli utenti:
 L'etichetta con il cassonetto barrato presente sul prodotto indica che il prodotto non deve essere smaltito tramite la procedura normale di smaltimento dei rifiuti domestici. Per evitare eventuali danni all'ambiente e alla salute umana riciclarlo in questo prodotto da altri rifiuti domestici in modo che possa venire riciclato in base alle procedure di rispetto ambientale. Per maggiori dettagli sui centri di raccolta disponibili, contattare l'ufficio governativo locale o il rivenditore del prodotto.

RAEE

CARATTERISTICHE TECNICHE
 Press. max: 0,5bar (50kPa) / 1bar / 2bar / 5bar
 Pressione in uscita: 10-27mbar (molla standard)
 Temp. di esercizio: -20°C +60°C
 Classe: B
 Gruppo: 2
 Filtraggio: 50um
 Gas combustibili: Metano, Aria, Gpl e gas di città.
 Materiali a contatto col gas: alluminio pressofuso, acciaio e membrane in NBR certificato DIVGW EN 549.
 Posizione e installazione: con max angolazione 90°
 Conformità: Regolamento 2014/626/UE (GAR) 2014/68/UE (PED)
 Prese di pressione: Solo se richieste nell'ordine.
 Attacchi: Filettati (1/2"; 3/4"; 1"; 1 1/4"; 1 1/2; 2") EN 10226
 Flangiate PN10 (DN25-DN32; DN40; DN50; DN65; DN80; DN100)
 Corpo Gas Governor: Alluminio pressofuso Gd - AISI12Cu - EN AB 46100

CE MADE IN ITALY
 Cod. 85-2; 12-15-067

cpfgroup.it
Tecnocontrol Srl
 Via Meglioli, n°17 20090 Segrate (MI)
 Italy Tel. +39 02 26922890
 www.tecnocontrol.it

geca
 Geca Srl
 Via E. Fermi, n°98 25064 Cussago (BS)
 Italy Tel. +39 030 3730218
 www.gecasrl.it

La ditta costruttrice si riserva il diritto di apportare qualsiasi modifica, estetica o funzionale, senza preavviso alcuno ed in qualsiasi momento.



GAS GOVERNOR

English

mod. RG - 500mbar/1bar/2bar/5bar



MADE IN ITALY



GAS GOVERNOR

RG015HC-FT-1B

1 2 3 4 5

- GAS GOVERNOR:**
 RG=Threaded connections
 RGD=Flanged connections
- DIMENSIONS:**
 015 = 1/2"
 020 = 3/4"
 025 = 1"
 25=DN25
 032= 1" 1/4
 32= DN32
 040= 1" 1/2
 40= DN40
 050= 2"
 50= DN50
 65=DN65
 80=DN80
 100=DN100
- CAPACITY:**
 HC=High Capacity
 SC=Small Capacity
- OPTIONAL:**
 -FT= With Filter
- BAR:**
 = 500mbar
 -1B= 1bar
 -2B= 2bar
 -5B= 5bar

GENERAL DESCRIPTION

GAS GOVERNOR can be installed in systems with automatic gas burners and in industrial gas distribution systems. GAS GOVERNOR have three membranes fitted inside them a Operating membrane (6), a Compensation membrane (7) and a Safety membrane (5) (refer to Fig. 1). A breather pipe and external discharge outlet is not necessary because the safety membrane avoids a gas leak into the environment more than 30 dm³/h, point 3.3.2 of the UNI-EN88-1 Norms.

MARKINGS

Depending on which model, GAS GOVERNOR are marked with their technical characteristics.

CE Class: A
 Group: 2
 Filter: No
 s.n. 20-11-201100000

UNI EN 88/1
 Body: 1"
 Pd:10-27mbar
 Pe max: 500mbar
 Cod.RG025

EAC

SPRING SETTING mbar

SPRING Model	RANGE mbar	500 mbar			1 - 2 - 5 bar		
		From 1/2" to 1"	HC From 1/2" to 1"	From 1 1/4" to DN100	From 1/2" to 1"	HC From 1/2" to 1"	From 1 1/4" to DN100
WHITE	5+14	✓	✓	✓	✓	✓	✓
YELLOW	6+22	✓	✓	✓	✓	✓	✓
NEUTRAL	10+27	✓	✓	✓	✓	✓	✓
RED	28+70	✓	✓	✓	✓	✓	✓
BLACK	60+130	✓	✓	✓	✓	✓	✓
BLUE	120+300	✓	✓	✓	✓	✓	✓
BROWN	220+480	✗	✗	✗	✓	✓	✓

To put out of service replace the spring with the suitable spacer.

PRESSURE SETTING

Unscrew the upper cap to gain access to the spring compressor (1) (Fig.1). The outlet pressure is regulated by rotating the spring compressor (2) in a clockwise direction to increase the pressure and in an anticlockwise direction to reduce the pressure. After making the adjustment, replace the upper cap (1).

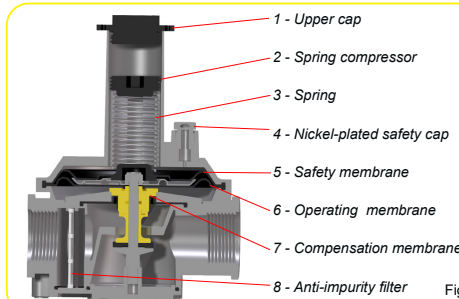


Fig.1

MAINTENANCE

GAS GOVERNOR do not require any maintenance. The substitution of the anti-impurity filter positioned at the base of the GAS GOVERNOR (Fig.2) is recommended for models fitted with a filter (RG015-FT, RG020-FT, etc).
 • Unscrew the six screws and remove the lower cover.
 • Extract the anti-impurity filter and substitute it with a new filter.
 • Check that the base gasket is integral then clean and replace the lower cover.
 • Replace the six fixing screws.
 A revision with the relative testing in the factory is recommended if there is a fault.


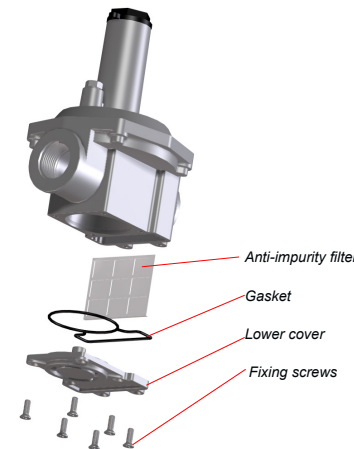



Fig.2 N.B. The anti-impurity filter must be of our manufacture.

DIAGRAM OF THE FRICTION LOSS

Without filter

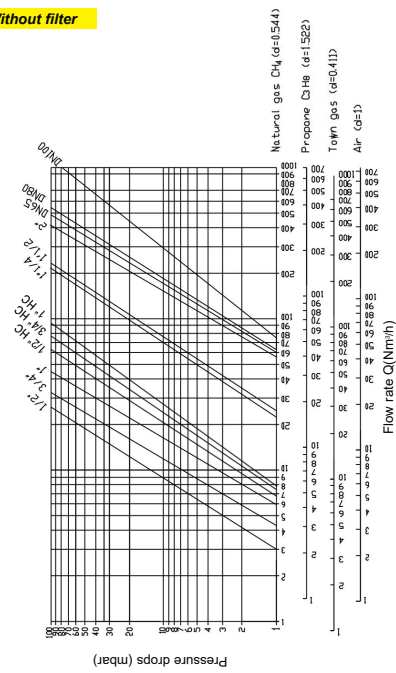

With filter

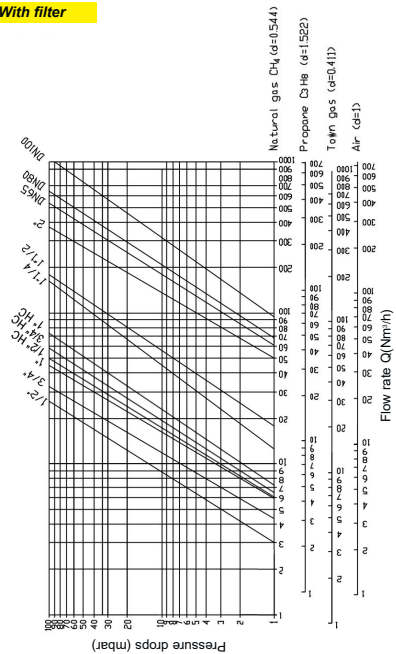


DENSITY

TYPE OF GAS	DV	TYPE OF GAS	DV
Natural gas	0,64	Town gas	0,47
Propane	1,57	Air	1,0

DIMENSIONS (mm) and WEIGHT (Kgs)


DIMENSIONS	A (mm)	B (mm)	C (mm)	D (mm)	WEIGHT (Kgs)
1/2" - 1/2" HC	154 - 174	100 - 120	115 - 138	76 - 133	0,72 - 1,15
3/4" - 3/4" HC	154 - 174	100 - 120	115 - 138	76 - 133	0,68 - 0,99
1" - 1" HC	154 - 174	100 - 120	115 - 138	76 - 133	0,66 - 0,95
DN25	177,5	114,5	/	180,0	1,46
DN32	273,5	195,5	/	296,0	4,62
DN40	283,0	195,5	/	304,0	4,85
DN50	340,0	245,0	/	338,0	7,8
1" 1/4	243,5	195,5	206,0	194,0	3,140
1" 1/2	243,5	195,5	206,0	194,0	3,060
2" SC	243,5	195,5	206,0	194,0	2,92
2"	301,0	245,0	264,0	235,0	5,8
DN65	440,0	320,0	/	427,0	15,7
DN80	440,0	320,0	/	427,0	15,5
DN100	440,0	320,0	/	427,0	15,0

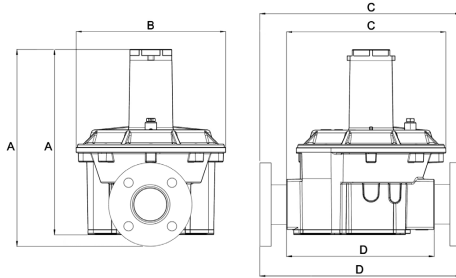

INSTALLATION AND POSITIONING

Carefully read the instructions before utilisation.
This device must be installed in accordance with the laws in force.
The GAS GOVERNOR can be installed in a vertical and horizontal position and with the arrow pressed into the body pointing towards the heating unit.
It must be positioned near to the regulation organs and preferably outside the environment in which the heating unit is present.

N.B. Install the GAS GOVERNOR away from atmospheric agents.
GAS GOVERNOR closes without flow and pressure increase around 30% of the Pd (pressure set) between utility and governor.
This is called lock - up.

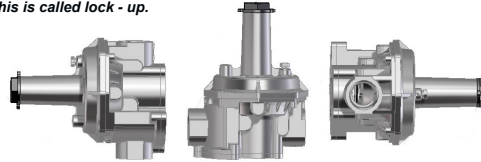

OUT OF SERVICE

- "OUT OF SERVICE" of GAS GOVERNOR proceed as follows:
- Unscrew the "Upper cap"
 - Unscrew the "Spring-Compressor".
 - Replace the "Spring" with the spacer (optional).
 - Screw the "Spring-Compressor" back in until it stops and reposition the "Upper cap".

DIRECTIVE 2012/19/UE (Waste from Electrical and Electronic Equipment - WEEE):
Information for users:
The label with the crossed-out wheeled bin symbol indicates that the product must not be disposed of with normal domestic waste. To avoid causing damage to the environment and human health, separate this product from other domestic waste so that it can be recycled in compliance with environmental protection procedures. For more details on available collection centers, please contact local government offices or the seller of the product.

INSTRUCTION LEAFLET

PAPER COLLECTION
Check the regulations of your municipality

TECHNICAL CHARACTERISTICS

Max. Pressure: 0,5bar (50kPa) / 1bar / 2bar / 5bar.
Outlet pressure: 10 - 27 mbar (standard spring).
Operating temperature: -20°C to +60°C.
Class: B.
Group: 2.
Filling: 50um.
Combustible gases: Methane natural gas, Air, L.P.G. and City gas.
Materials in contact with the gases: Die cast aluminium, steel and membranes in NBR certified DVGW EN 549.
Position and installation: With a maximum angulation of 90°.
Conformity: Regulation 2016/426/UE (GAR).
2014/68/UE (PED).
Attachments and pressure sockets: Only if requested in the order.
Connections: Threaded (1/2", 3/4", 1", 1 1/4", 1 1/2", 2") EN 10226.
DN25, DN32, DN40, DN50, DN65, DN80, DN100 Sliding Aluminium flange PN10.
Die - Cast Aluminium Gd - AISI12Cu - EN AB 46100.

CE
MADE IN ITALY

TECNOCONTROL
Via E. Fermi, n°47 20090 Segrate (MI)
Italy Tel. +39 02 26922890
www.tecnocontrol.it

geca
GECA Srl
Via E. Fermi, n°98 25064 Gussago (BS)
Italy Tel. +39 030 3730218
www.geca.srl.it

The manufacturer reserves the right make any aesthetic or functional change without notice and at any time.



GAS GOVERNOR

Italiano

mod. RG - 500mbar/1bar/2bar/5bar



MADE IN ITALY



GAS GOVERNOR

RG015HC-FT-1B

- 1
- 2
- 3
- 4
- 5

- GAS GOVERNOR:**
RG= Attacchi filettati
RGD= Attacchi flangiati
- DIMENSIONI:**
015 = 1/2"
020 = 3/4"
025 = 1"
25=DN25
032= 1"1/4
32= DN32
040= 1"1/2
40= DN40
050= 2"
50= DN50
65=DN65
80=DN80
100=DN100
- CAPACITA':**
HC= Alta capacità
SC= Piccola capacità
- OPTIONAL:**
-FT= Con filtro
- BAR:**
= 500mbar
-1B= 1bar
-2B= 2bar
-5B= 5bar

DESCRIZIONE GENERALE

I GAS GOVERNOR mod. RG possono essere installati su impianti con bruciatori di gas automatico e su impianti di distribuzione industriale.
I GAS GOVERNOR possiedono al loro interno 3 membrane: membrana di Lavoro (6), di Compensazione (7) e di Sicurezza (5) Fig.1.
Non è indispensabile un condotto di sfogo e scarico all'esterno poiché la membrana di Sicurezza evita che si possa verificare una perdita di gas nell'ambiente superiore a 30 dm³/h punto 3.3.2 delle Norme UNI-EN88-1.

MARCATURA

A seconda del modello i GAS GOVERNOR mod. RG sono marcati con le proprie caratteristiche tecniche.

CE 0497
s.n. 20-11-201100000

Class: A
Group: 2
Filter: No

UNI EN 88/1
Body: 1"
Pd:10-27mbar
Pe max: 500mbar
Cod.RG025

EAC


TARATURA MOLLE mbar

Mod. Molla	RANGE mbar	500 mbar			1 - 2 - 5 bar		
		da 1/2" a 1"	HC da 1/2" a 1"	da 1"1/4 a DN100	da 1/2" a 1"	HC da 1/2" a 1"	da 1"1/4 a DN100
BIANCA	5+14	✓	✓	✓	✓	✓	✓
GIALLA	6+22	✓	✓	✓	✓	✓	✓
NEUTRA	10+27	✓	✓	✓	✓	✓	✓
ROSSA	28+70	✓	✓	✓	✓	✓	✓
NERA	60+130	✓	✓	✓	✓	✓	✓
BLU	120+300	✓	✓	✓	✓	✓	✓
MARRONE	220+480	✗	✗	✗	✓	✓	✓

Per la messa fuori servizio sostituire la molla con il distanziale adeguato.

TARATURA PRESSIONE

Per accedere ai premi-molla svitare il tappo superiore (1) Fig.1.
La pressione di uscita viene regolata ruotando il premi-molla (2) Fig.1.
Tramite una chiave a brugola di 10mm girare il premi-molla (2) in senso orario per aumentare la pressione, per diminuire la pressione girare il premi-molla (2) in senso antiorario.
Dopo aver effettuato la regolazione, riposizionare il tappo superiore (1).

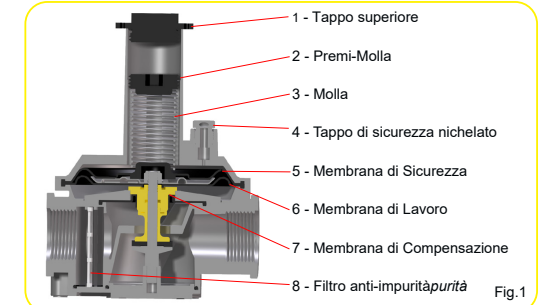

MANUTENZIONE

I GAS GOVERNOR mod. RG non necessitano di alcuna manutenzione.
Per i modelli con il filtro (RG015-FT, RG020-FT...etc) si consiglia la sostituzione del filtro anti-impurità situato alla base del GAS GOVERNOR (Fig.2).
• Svitare le sei viti e togliere il coperchio inferiore.
• Estrarre il filtro anti-impurità e sostituirlo con quello nuovo.
• Verificare che la guarnizione della base sia integra e pulita e richiudere il coperchio inferiore.
• Fissare il tutto con le apposite viti di fissaggio.
In caso di guasto consigliamo una revisione con relativo collaudo in fabbrica.

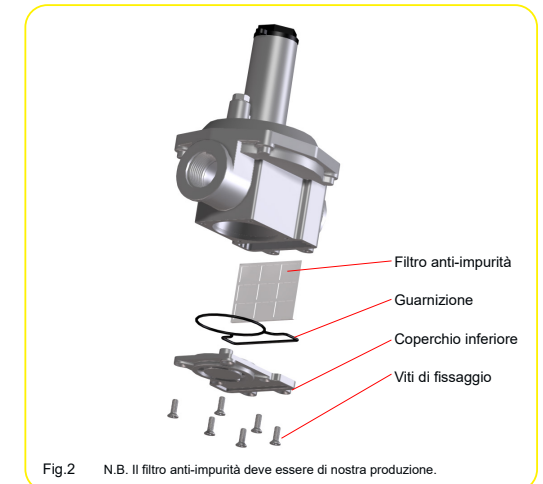


Fig.2 N.B. Il filtro anti-impurità deve essere di nostra produzione.