







TECNOCONTROL S.r.I.Via Miglioli, 47 20090 SEGRATE (MI) Italy- Tel. (+39) 02 26922890 - Fax (+39)02 2133734http: www.tecnocontrol.ite-mail: info@tecnocontrol.it



Leggere Attentamente e Conservare sia questa Istruzione, sia gli altri documenti allegate a questo prodotto.

Tutta la documentazione inerente al prodotto deve essere conservata, perché contiene le procedure da eseguire nelle operazioni di manutenzione periodiche e di assistenza.

INFORMAZIONI E AVVERTENZE d'USO

Si ricorda che la mancata manutenzione può influenzare il funzionamento del prodotto e quindi non garantirne il corretto funzionamento. TECNOCONTROL su richiesta è in grado di provvedere alla verifica e taratura periodica con emissione del Rapporto di Taratura.

TECNOCONTROL declina ogni responsabilità se il prodotto fosse modificato o utilizzato impropriamente non come previsto, fuori dai limiti di funzionamento nominali o per applicazioni diverse da quelle cui è destinato.

La scelta e l'uso del prodotto sono di esclusiva responsabilità del singolo operatore che deve rispettare le norme antiinfortunistiche e di sicurezza vigenti. Il prodotto non può essere utilizzato in aree con possibile presenza in ambiente di gas infiammabili o aree classificate Ex.

Le norme, leggi ecc. citate, sono quelle valide al momento della data di emissione. Vanno comunque rispettate tutte le norme nazionali applicabili nel paese dell'utilizzatore.

Le informazioni contenute in questo manuale sono accurate, aggiornate alla data della pubblicazione e sono il risultato della continua ricerca e sviluppo, le specifiche di questo prodotto e quanto indicato in questo manuale potranno essere modificati senza preavviso.

Orologio. In assenza dell'alimentazione, l'orologio funziona con la Batteria al Litio, la cui durata, in condizioni di normale funzionamento è oltre 5 anni. Nel caso la batteria al Litio si esaurisca sarà necessario inserire la data e l'ora corretta (vedi IMPOSTAZIONI-Data e Ora) e poi far sostituire al più presto la batteria con una nuova.

Batteria al Litio. Per garantire durata e funzionamento, la batteria al Litio non deve rimanere mai completamente scarica, ma almeno al 40% della sua carica e va ricaricata completamente prima dell'uso. **Pile Alcaline**. È una alternativa alla Batteria principale utilizzabile in caso di necessità.



INFORMAZIONE SMALTIMENTO

Il prodotto, ai sensi delle Direttive Europee, relative allo smaltimento dei rifiuti e alla riduzione dell'uso di sostanze pericolose nelle apparecchiature elettriche/elettroniche, alla fine della sua vita utile, deve essere smaltito separatamente dagli altri rifiuti presso centri europei qualificati, o restituito a TECNOCONTROL per lo smaltimento.

Una corretta raccolta differenziata e l'avvio dell'apparecchiatura dismessa al riciclaggio, al trattamento e allo smaltimento ambientalmente compatibile, contribuisce a evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il reimpiego e/o riciclo dei materiali di cui è composta.

NOTE PER LA LETTURA DELLE ISTRUZIONI

ST200PT	Strumento in valigia di trasporto senza la STAMPANTE.
ST200PT/S	Strumento in valigia di trasporto completo di STAMPANTE.
FIRMWARE	Programma interno al microcontrollore che gestisce tutte le funzioni della centrale.
\triangle	Simbolo che indica un'importante avvertenza delle istruzioni.
\overline{i}	Simbolo che indica un'informazione o una spiegazione aggiuntiva delle istruzioni.

Documento / Document name: IST-3200.PT01.01_ST200PT-IT (16.12.2019).docx				
Oggetto / Subject : ST200PT				
Rev.	Data / Date	Da / By	Note	
0	16/12/2019	UT/FG	Emissione del Documento	

SOMMARIO

INFORMAZIONI E AVVERTENZE d'USO	2
INTRODUZIONE	5
Figura 1 – Contenuto Valigia di trasporto e Codici Ricambi.	6
DESCRIZIONE STRUMENTO	7
Figura 2 – Strumento ST200PT	7
Password	7
Connessioni	7
Batteria al Litio (Alimentazione Principale)	8
Figura 3 – Batteria Li-Ion BA047	8
Pile Alcaline (alimentazione alternativa)	8
Pulizia Custodia	8
UTILIZZO	9
DISPLAY	9
TASTI (Touch-Screen):	9
Display – Schermate iniziali	10
Strumento in carica	10
Display – Schermate AVVIO	11
Accensione strumento Menù Principale	11
	12
Funzione Manometro	12
Manometro – Pressione Relativa	12
Manometro - Grafico	12
Funzione Prova Tenuta GAS	12
Prova Tenuta Gas – Salvataggio Prova Preimpostata 1 o 2	14
Prova Tenuta Gas – Avvio Prova	14
Prova Tenuta Gas – Rapporto di Prova Prova Tenuta Gas – Stampa	15
Funzione ANAGRAFICA	15
ANAGRAFICA – Lista Clienti	16
ANAGRAFICA – Tastiera	16
	16 17
Funzione IMPOSTAZIONI	19
IMPOSTAZIONI - Lingua	19
IMPOSTAZIONI - Data e Ora	19
IMPOSTAZIONI - Salva Dali su SD IMPOSTAZIONI – Carica Dati da SD	19
IMPOSTAZIONI - Seleziona Stampante	20
IMPOSTAZIONI - Retroilluminazione	20
IMPOSTAZIONI – Aggiornamento Firmware	20
USO DELLA STAMPANTE STAMPANTE IR - Sostituzione pile alcaline	22 22
UNI 7129 - Impianto gas uso domestico	24
Effettuare la prova di tenuta (con Aria):	24
Tabella 1 - UNI 7129 Limiti di accettabilità.	24
UNI 11137 - IMPIANTO GAS	25
Tabella 2 - UNI 11137 Famiglie gas e Pressioni da utilizzare.	25
<i>Effettuare la prova preliminare (con Gas):</i> Tabella 3 - UNI 11137 Limiti di accettabilità.	25 25
Effettuare la prova con metodo indiretto (con Aria o Gas):	26

TECNOCONTROL S.r.I. - Via Miglioli, 47 20090 SEGRATE (MI) - Tel. 02. 26 92 28 90 - Fax 02. 21 33 734

IST-1516.CE01.01	CE516P / Istruzioni d'uso	Pag. 4/29
Tabella 4 - UNI 11137 Lin	niti di accettabilità.	26
UNI 11528 - IMPIANTO	GAS	27
<i>Effettuare la prova di tenu</i> Tabella 5 - UNI 11528 Lin	i ta (con Aria): niti di accettabilità.	27 27
PROVA ALTA PRESSIC	DNE	28
Effettuare la prova di tenu	ita (con ARIA):	28
Appendice		29
CARATTERISITCHE TECN	IICHE	29
Alimentazione		29
Caratteristiche Strumento		29
Specifiche di misura		29
Gestione Dati e Interfacce	e	29
Condizioni di Utilizzo		29

Pag. 5/29

INTRODUZIONE

- ST200PT è un manometro elettronico utilizzabile sia per le prove di tenuta impianto sia per misure di pressione statica, dinamica e differenziale con indicazione del valore misurato minimo e massimo.
- Ha la possibilità di eseguire altre misure tramite sonde esterne opzionali.
- Misura il volume di un impianto in modo automatico se non è già noto all'operatore.
- Durante le prove compensa le variazioni della temperatura ambiente.
- Auto zero automatico o manuale
- Visualizza il grafico della misura in tempo reale.
- L'operatore può programmare i parametri in base alle proprie esigenze.
- Ha integrato Orologio e Calendario
- Ha integrato la funzione di Data-Logger delle misure.
- Ha un archivio, esportabile / importabile (micoSD-Card) che permette di gestire i rapporti di prova effettuati, con i dati del cliente e del tecnico incaricato.
- ST200PT è in grado di eseguire le prove di tenuta in modo manuale o utilizzando i parametri già preimpostati in conformità alle seguenti norme:
- <u>UNI 7129</u> Impianti a gas per uso domestico e similari alimentati da rete di distribuzione -Progettazione, installazione e messa in servizio - Parte 1: Impianto interno.
- <u>UNI 11137</u> Impianti a gas per uso domestico e similare. Prescrizioni generali e requisiti per i gas della II e III famiglia. Linee guida per la verifica e per il ripristino della tenuta di impianti interni.
- <u>UNI 11528</u> Impianti a gas di portata termica maggiore di 35 kW Progettazione, installazione e messa in servizio.

Tutti i parametri preimpostati nello strumento sono basati in funzione delle norme Italiane (UNI) e di quelle europee (EN). Se lo strumento fosse utilizzato all'estero o per norme diverse, è possibile modificare i parametri delle prove entro i limiti prefissati per ogni tipo di prova. Per eventuali chiarimenti contattare Tecnocontrol.

LE PROVE DI TENUTA DEVONO ESSERE ESEGUITE SOLO DA PERSONALE QUALIFICATO E AUTORIZZATO, IN BASE ALLE PRESCRIZIONI DELLE NORME APPLICABILI ALL'IMPIANTO IN PROVA.

LA CONOSCENZA E L'APPICAZIONE CORRETTA DELLE NORME È RESPONSABILITÀ DELL'OPERATORE.

IN BASE ALLA PROVA SELEZIONATA, LE FORMULE E I CALCOLI ESEGUITI DALLO STRUMENTO SONO CONFORMI ALLE CORRISPONDENTI NORME SOPRA ELENCATE AGGIORNATE ALLA DATA DI PRODUZIONE.

L'AGGIUNTA DI ALTRE PROVE DI TENUTA O EVENTUALI AGGIORNAMENTI DELLE NORME O ALTRE FUNZIONI DELLO STRUMENTO SARANNO OGGETTO DI AGGIORNAMENTO DEL FIRMWARE (*vedi* <u>IMPOSTAZIONI – Aggiornamento Firmware</u>). CE516P / Istruzioni d'uso

• La valigia di trasporto può contenere:



Figura 1 – Contenuto Valigia di trasporto e Codici Ricambi.

DESCRIZIONE STRUMENTO



Figura 2 – Strumento ST200PT

Password

Lo strumento ha alcune funzioni protette da Codice (max. 6 numeri), riservate ai soggetti abilitati: <u>"FABBRICA"</u>: *Menù accessibile solo a Tecnocontrol per le impostazioni di fabbrica*.

Apertura/Chiusura Vano Batterie

Lo strumento, sul retro, ha il coperchio apribile per accedere al vano Batterie, alla scheda microSD-Card e alle schede opzionali. Il coperchio è a scatto e si apre premendo sulla zigrinatura e poi facendolo scorrere verso il basso.



Prima di aprire il Vano Batterie, se fosse in uso, scollegare il cavo USB. La mancata rimozione può provocare danni irreversibili allo strumento.

Connessioni

Porta USB-C: è sul lato sinistro dello strumento, protetta dallo sportellino di gomma con il simbolo • Serve per ricaricare la batteria al litio, per collegare lo strumento al PC, per caricare gli eventuali aggiornamenti Firmware e per utilizzi futuri.

PORTA USB

TIPO C

Prese di pressione $P_L e P_H$: poste sul lato superiore dello strumento, sono gli ingressi per le misure di pressione / tenuta. La porta P_L è l'ingresso per pressioni basse **da -50 a +600 mbar** (Low). La porta P_H è l'ingresso per pressioni **da -0,6 a +6 bar**.

Connettore push-pull per le sonde esterne: posto in alto, serve per il collegamento delle sonde esterne.

Batteria al Litio (Alimentazione Principale)

Il display nell'angolo in alto a destra, mostra lo stato della batteria.

0	Batteria completamente scarica. Ricaricare subito altrimenti lo strumento si spegne.
	Batteria a metà carica
ø	Batteria in ricarica
∎ر	Strumento senza batterie, alimentato da rete tramite l'alimentatore esterno e cavo USB tipo C

La Batteria al Litio può essere ricaricata anche se scollegata dallo strumento. La batteria si ricarica utilizzando la porta USB-C, inoltre quando è in fase di ricarica, il LED è Arancione, poi a carica completata il Led diventa Verde.

Ricaricare esternamente la Batteria al Litio, permette di utilizzare lo strumento con una 2° batteria o con le Pile Alcaline. Se necessario la Batteria al litio può essere ricaricata anche su veicoli utilizzando il cavo USB collegato a un adeguato adattatore per telefoni cellulari con uscita 5VDC / 2A.

Figura 3 – Batteria Li-Ion BA047

Pile Alcaline (alimentazione alternativa)

Se necessario, lo strumento può funzionare anche con 4 pile alcaline AA, ma per un tempo limitato (*30÷90 minuti, perché le pile alcaline hanno una capacità inferiore alla batteria al Lito*).

 \triangle

Si ricorda che per utilizzare le Pile alcaline è necessario rimuovere la batteria al Litio. Si consiglia utilizzare pile di buona qualità per garantire una discreta autonomia, inoltre vanno sempre rimosse se lo strumento non fosse utilizzato per molto tempo.

Possono essere utilizzate anche batterie AA ricaricabili, ma in questo caso dovranno essere ricaricate solo esternamente con un adeguato carica batteria.

Manutenzione

<u>Verifica Calibrazione</u>: una volta l'anno, si consiglia di programmare un controllo completo dello strumento, inviandolo a TECNOCONTROL che provvederà alla verifica funzionale dello strumento e alla taratura periodica con emissione del Rapporto di Taratura.

<u>Connessioni</u>: verificare periodicamente che il *CONO*, il *TUBO*, i vari *RACCORDI* e le relative *GUARNIZIONI*, siano puliti e in buono stato per garantire la tenuta della pressione durante le prove. Si consiglia di sostituirli quando sono usurati, schiacciati o presentino crepe.

<u>Prese di pressione</u> (P_L/P_H): Prestare attenzione che nelle prese di misura della pressione non entri sporco o umidità o liquidi.

<u>Connessioni elettriche</u>: verificare che polvere o liquidi entri nel connettore per le sonde esterne o in quello USB.

<u>Batteria</u>: se lo strumento non fosse usato per lunghi periodi, ricaricare periodicamente (*almeno ogni 3 mesi*) la Batteria al litio perché la scarica completa la danneggia.

<u>Stampante</u>: se la stampante non fosse usata per lunghi periodi, rimuove le pile.

Pulizia Custodia

Per pulire esternamente la custodia dello strumento, usare un panno morbido asciutto, non utilizzare solventi o detergenti abrasivi soprattutto sul display.

UTILIZZO

DISPLAY

Il display è grafico a colori 240x 320 pixel di tipo "Touch" resistivo.

TASTI (TOUCH-SCREEN):

Lo strumento, esternamente sul lato destro, ha un solo il tasto per accensione e spegnimento.

Tutti gli altri sono tasti "tattili" disponibili sul display "Touch-Screen" in base alla funzione in uso. La maggior parte dei tasti funzione sono visualizzati nella parte inferiore o superiore del display, gli altri per le funzioni specifiche sono attivi su tutto il display.

Per agire sui tasti è necessario premere sul display, per un risultato migliore è possibile utilizzare, l'unghia del dito o una qualunque penna per display con il gommino.

Ogni volta che il display touch è premuto, per avvisare dell'azione, il buzzer interno emette un bip breve, ma un tasto touch diventa di colore verde, solo quando è stato premuto in modo corretto o per evidenziare che una funzione è in corso di esecuzione (es. durante la stampa).

? ?	Apre un pop-up con una breve informazione relativo la funzione in uso.
	Richiama il <i>Menù principale</i> da qualunque schermata.
\sim	Avanti, scorre le pagine se disponibili.
$\langle -$	Indietro, scorre le pagine se disponibili.
\triangleright	Avvia, inizia una prova o attiva una funzione.
ĴĴ	Salva i dati inseriti e ove previsto scrive in memoria o salva su SD-Card.
ૡૢૼૢૢૢૺ	Impostazioni dello strumento o della funzione in esecuzione.
ZERO	Porta a Zero il valore, ove previsto.
	Stampa, invia i dati alla stampante (esterna) impostata.
	Cancella, elimina i dati inseriti relativi alla funzione in uso.
r::Ô	Inserisce o Modifica i Dati identificativi dell'Azienda.
8 <u>=</u>	Inserisce o Modifica i Dati dell'Anagrafica Cliente/Operatore selezionato.
	Visualizza il report selezionato
ი	Tasto di accensione (solo con strumento spento in carica).
	Cursore, indica che è possibile scorrere i dati visualizzati sul display.
Ο	Avvia la funzione Data-Logger
	Ferma la funzione Data-Logger

CE516P / Istruzioni d'uso

Display – Schermate iniziali

Strumento in carica

Quando lo strumento è spento, ma è collegato all'alimentatore tramite il cavo alla **PORTA USB (TIPO C)**, il display mostra che la batteria è in carica.

Il display mostra che la batteria al litio è in fase di ricarica, riempiendo in verde il simbolo.

Se fossero inserite le Pile alcaline, il simbolo rimarrà fisso vuoto (come nell'immagine a lato) e non sarà abilitata la funzione di ricarica.

Quando la batteria al litio è completamente carica, il display mostra graficamente che la batteria ha raggiunto la sua carica massima.

Da questa videata è possibile anche accendere lo strumento, agendo sul tasto touch ().

Lo strumento, se collegato all'alimentatore tramite il cavo alla **PORTA USB** (**TIPO C**), può funzionare anche se non fosse inserita la Batteria al litio oppure se le Pile alcaline fossero esarite o non presenti.

Lo strumento può essere ricaricato anche su veicoli, utilizzando il cavo USB collegato a un adeguato adattatore con uscita 5VDC / 2 A, tipo quelli utilizzati per telefoni cellulari. (Vedi paragrafo "Batteria al Litio").





Display – Schermate AVVIO

Accensione strumento

Lo strumento si accende e si spegne con il **TASTO ON/OFF** posto sul fianco destro dello strumento (Vedi Fig.1).

All'accensione lo strumento esegue il carico del programma sia graficamente sia con un conteggio numerico crescente (0÷100).

Il display mostra oltre al Codice del prodotto, anche la versione del Firmware installato (**FW**), la versione della Scheda Elettronica montata (**HW**) e il Numero di Serie (**S**/**N**) che lo identifica in modo univoco.

Menù Principale

Terminato il tempo di avvio, appare la *schermata principale* con i menù delle varie funzioni utilizzabili, divisi per pagine.

In alto a sinistra è presente l'orologio con ore, minuti e la data, mentre a destra l'icona mostra lo stato di carica della batteria 💷 o la

presenza dell'alimentazione di rete. 📌 ma solo senza le batterie installate o funzionanti.

La prima pagina mostra i primi 4 tasti touch.

I tasti menù "**1**" e "**2**" servono per accedere direttamente alle funzioni preimpostate, programmabili dall'utente in base alle proprie esigenze (vedi capitolo più avanti).

Gli altri 2 tasti menù servono per accedere alla funzione **MANOMETRO** e alle prove di tenuta **GAS**.

In basso (zona tasti touch) agire su
per cambiare pagina e
visualizzare gli altri tasti menù.

In questa pagina sono presenti altri 4 tasti menù per la gestione dei dati relativi all'ANAGRAFICA, ARCHIVIO, DATALOGGER e infine le IMPOSTAZIONI dello strumento (Vedi avanti i capitoli specifici).

In basso (zona tasti touch) agire su 🤄 per tornare indietro.



 \leq



Nelle pagine con la barra tasti touch in alto, 🧊 apre una breve spiegazione e 🎧 richiama il **Menù principale.**





CE516P / Istruzioni d'uso

FUNZIONI STRUMENTO



Funzione Manometro

Dal menù principale agire sul tasto per accedere alla funzione Manometro.

Con il tasto 🔅 è possibile cambiare il metodo di misura della Pressione, da *P Relativa* a *P Differenziale* (Vedi avanti capitolo).



<u>Manometro – Pressione Relativa</u> Si utilizza la **PRESA di PRESSIONE P**_L

Il tasto ZERO permette di azzerare il valore prima di iniziare la misura.

Rispettare i limiti di pressione dello strumento. Pressioni oltre i limiti funzionali del sensore ne causano la rottura.

Manometro - Grafico

Il grafico è anche un tasto, se attivato, migliora la visualizzazione (Fuoco Abilitato) centrando la scala sulla misura in corso.

Se necessario con il tasto is stampa il valore misurato (**Pres.**), il valore minimo (**Pmin**) e massimo (**Pmax**) e la Temperatura (**Temp.**) della prova.

Il tasto <-- interrompe la prova e torna al menù principale.

Prima di premere 🚔 accendere la stampante e se è impostata quella IR, deve essere allineata alla PORTA IR dello strumento.

Manometro - Pressione Differenziale

P Differenziale:-----utilizza sia la PRESA di PRESSIONE P_L sia la P_H I tasti, il grafico e le indicazioni sono le stesse descritte nel capitolo precedente, che riguarda la misura di Pressione Relativa.



IST-1516.CE01.01 CE516P / Istruzioni d'uso		Pag. 13/29
		14:35 15 nov 19
Funzio	one Prova Tenuta GAS	
Dal me	enù principale agire sul tasto per accedere alla e GAS.	<35KW - Test UNI 7129
È most	rato l'elenco delle prove e il riferimento alle relative	<35KW - Test UNI 11137 preliminare
Ogni riga è un f	asto touch, agire sulla riga per accedere alla	<35KW - Test UNI 11137 Tenuta (indiretto)
Il tasto	a al menù principale.	>35KW - Test UNI 11528
		Test Alta Pressione
<i>I parametri c</i> funzione della	che verrano visualizzati possono essere diversi in a prova e della norma scelta. (Vedi Prove Tenuta)	
Dopo aver eseguito	la scelta, sono visualizzati i dati relativi la prova.	14:35 15 nov 19
Operatore	Nome dell'operatore incaricato della prova.	🤋 UNI 7129 Tenuta 🏠
Cliente Volume Impianto	Nome del cliente. Automatico (lo strumento stesso calcola il volume).	Operatore: NOME OPERATORE
Pressurizzazione	Manuale (se già noto, va inserito il valore). Automatico (lo strumento utilizza la pompa integrata).	Cliente NOME CLIENTE
Pressione di prova	Manuale (<i>Va utilizzata una pompa esterna</i>). Valore di pressione applicata per la prova	Volume impianto Automatico
Stabilizzazione	Tempo per stabilizzare la pressione prima della prova.	Pressurizzazione Automatico
Ripetizione Test	Numero di volte cui sarà ripetuto il test.	Pressione di prova 120 mbar
In basso (zona tas proseguire alla pag	sti touch) agire su < per tornare indietro, per ina successiva agire su	Stabilizzazione 15 min
Ogni riga è un taste scelta ed eventua modifica e sempre norma selezionata)	o, agire sulla riga per accedere alla corrispondente le modifica del valore (solo se è permessa la entro i limiti ammessi dalla norma per la prova e la	Operatore Nome operatore Nome operatore Nome operatore
Nell'esempio a fiai pop-up con l'elenco strisciando sulla fin	nco, dopo aver selezionato " Operatore " appare un o degli operatori già memorizzati. Scorrere l'elenco estra e poi agire su OK per confermare.	Nome operatore
		2 UNI 7129 Tenuta
		Tempo di prova 5 min
Nella seconda pagi	na, continua l'elenco dei dati disponibili.	Ripetizione Test 1
Selvarli con tasto	Encliesti e possibile.	
Preimpostata 2".		
Avviare la prova co	n il tasto 🕞 .	

CE516P / Istruzioni d'uso

Prova Tenuta Gas – Salvataggio Prova Preimpostata 1 o 2

preimpostata, scegli il Dalla videata precedente, se i dati sono quelli richiesti, è possibile numero: Ripet salvarli con il tasto 🔚 e utilizzarli come "Prova Preimpostata 1" oppure "Prova Preimpostata 2". Questa scelta permette di ripetere rapidamente una prova o velocizzare prove ripetitive accedendo direttamente alla prova da menù principale. Nei tasti 1 e/o 2 apparirà anche un breve promemoria del tipo di prova preimpostata. 1 2 Se è stato scelto il metodo Manuale nei parametri Volume Impianto, oppure in Pressurizzazione, apparirà la schermata, dove inserire il 4 5 valore utilizzando la tastiera touch. 7 8 0 \triangleleft ESCI Prova Tenuta Gas – Avvio Prova Avviata la prova con il tasto \triangleright appare il 15 nov 19 14:35 pop-up che suggerisce quale PRESA DI PRESSIONE utilizzare per quella prova. **UNI7129 Tenuta** ST200P Dopo aver accettato il suggerimento con il Collegare lo strumento tasto "OK", la prova sarà avviata. 14 m : 20 s all'impianto sull'uscita di pressione P1 Il display mostra il tempo (**m : s**) mancante al termine della prova, sotto il valore della OK

pressione misurata è presente un breve messaggio che mostra l'operazione in corso. Sotto il grafico mostra in tempo reale l'andamento.

Attendere

La pompa sta portando l'impianto alla pressione Pressurizzazione richiesta. Stabilizzazione tempo di stabilizzazione della pressione inserita.

Esecuzione ... Calcolo in corso

I messaggi che saranno visualizzati possono essere diversi in funzione della prova e della norma scelta.

 \triangleright

UNI 7129 Tenuta

Salvo come prova

14:35 15 nov 19

V

Temp

Inserire il volume conosciuto in dm3 (Massimo 1000 dm3)









ណ៍

14:35 15 nov 19 Ş **RAPPORTO** ណ៍ Prova Tenuta Gas – Rapporto di Prova UNI 7129 Tenuta Il display, terminata la prova, mostrerà il **RAPPORTO** con il risultato Inizio Prova 15 Nov 19 ottenuto. h: 15:20 Stabilizzazione: 15 min Con il cursore laterale destro **e possibile scorrere le altre righe** Tempo di prova: 5 min del rapporto. -- Prova 1 Con il tasto 🔚 la prova è salvata in ARCHIVIO in base al Cliente Vol= 45.00 dm3 T1= 27.32°C (se inserito) e la Data di esecuzione. (Vedi avanti capitolo GESTIONE P1= 109.44 mbar ARCHIVIO). T2= 27.88°C P2= 109.41mbar Con il tasto 🚔 si avvia la stampa completa del Rapporto. DP= 0.03mbar DPmax= 0,1mbar Per tornare al menù principale, successiva agire su i 🤣 \sim ST200PT by Tecnocontrol SN:ST0000001 FW: 01.00 HW:00 Azienda: abcbdefg CF/PI: 00000000000 UNI 7129 Tenuta Prova Tenuta Gas – Stampa Inizio Prova: 15 nov 19 Ore: 15:20 Se con il tasto 🚔 si è inviato il **RAPPORTO** alla stampante. -- Prova 1 Lo scontrino conterrà oltre all'intestazione con i dati identificativi Vol= 45.00 dm3 univoci dello strumento, i dati dell'Azienda, la Norma scelta per la T1= 27,32°C P1= 109.44 mbar prova, la Data e l'Ora della prova, i valori ottenuti (per il numero di T2= 27.88°C prove impostate) e infine il Risultato ottenuto. In fondo allo scontrino è P2= 109.41mbar indicato il Cliente, l'Operatore incaricato e lo spazio per la Firma. DP= 0.03mbar DPmax= 0,1mbar PROVA SUPERATA Cliente: Operatore _____ Firma Funzione ANAGRAFICA 14:35 15 nov 19 Dal menù principale agire sul tasto per accedere alla V Lista Clienti ស funzione ANAGRAFICA. Qui è possibile gestire i propri CLIENTI (Lista Clienti). AB **1 COGNOME NOME** Con 🔅 si accede all'anagrafica **OPERATORI**. (dove le voci sono CD EF 2 Cognome, Nome e N. Seriale = numero dell'operatore). GH 3 Oppure con <--- torna indietro. IJ Con si accede ai dati dell'AZIENDA. (dove le voci sono 4 ΚL Azienda, CF/PI, Via, C.A.P., Città, e Note). MN 5 OP Per scorrere strisciare con il dito al centro del display o utilizzare 6 ST le lettere laterali per ricercare un cognome. 7 UV Per inserire un nuovo Cliente/Operatore agire sulla prima riga WX 8 vuota disponibile. YΖ La riga diventa verde indicando che è selezionata. 8=6 \leq M Agire su Reverse all'inserimento nuovo Cliente, Operatore.

CE516P / Istruzioni d'uso

ANAGRAFICA – Lista Clienti

Dopo aver agito sul tasto Rev , saranno visualizzati i dati **CLIENTE**. Ogni riga è un tasto, agire sulla riga per accedere e inserire la voce richiesta. Apparirà la tastiera touch per l'inserimento.

Cognome, **Nome**, **Azienda**, **Via**, **CF/PI** (*Codice fiscale o Partita IVA*), **CAP** (*codice postale*), **Città**, **Seriale contatore** (*Numero di serie del contatore del gas*) e eventuali **Note** (max.18 caratteri).

In basso (*tasti touch*) agire su per tornare indietro, se i parametri sono quelli richiesti, è possibile salvarli con , oppure cancellarli con .

ANAGRAFICA – Tastiera

Per cambiare la tastiera da caratteri in minuscolo a quelli in maiuscolo, agire sul tasto 🔐 (diventa verde) premere di nuovo sul tasto per inserire la scelta.

Il tasto _____ inserisce uno spazio tra i caratteri.

Il tasto <a>l cancella i caratteri inseriti.

Ogni volta che si preme il tasto 1 @ A si cambia la tastiera con numeri **0**, **1** ÷ **9**, poi con un primo gruppo di simboli **! \$ % &** / **()** = * . e poi con gli altri simboli < > ? : + - _ # @ , . Poi torna ai caratteri. Con OK si inserisce il valore, con ESCI si torna indietro senza

inserire nessun valore.

Si ricorda che un tasto touch diventa di colore verde, quando è premuto, per evidenziare che il comando è stato accettato.

14:35 15 nov 19 Ş Archivio ណ AB 1 Giorno Mese Anno CD 2 Cliente Giorno Mese Anno EF GH 3 IJ 4 KL MN 5 OP 6 ST 7 UV WΧ 8 YΖ $\equiv l$

Città:					
Seriale contatore:					
Note:	Note:				
$\langle -$		Î			
	Nome				
Qui appare il testo inserito					
a b c	d e f	ghi			
jil	m n o	pqr			
stu	v w x	y z			
Â	1@A				
ESCI		ок			

Ξ		
1	2	
ò l	0	l ò

l

Funzione ARCHIVIO

Dal menù principale agire sul tasto per accedere alla funzione **ARCHIVIO**.

Qui è possibile gestire le **Prove di Tenuta** effettuate.

Pag. 16/29

COGNOME CLIENTE

NOME CLIENTE

Codice Fiscale

codice postale

រោ

Cliente

14:35 15 nov 19

V

Nome:

Via:

CF/PI:

c.a.p.:

Azienda:

Cognome:

151-1510.CEUT.UT	IST-1516	6.CE01.01
------------------	----------	-----------

CE516P / Istruzioni d'uso



1

Ĺ

CE516P / Istruzioni d'uso

Scelti i Valori da registrare e il Tempo di campionamento, si avvia la registrazione con **O**.

Se nello strumento non fosse inserita la microSD-Card, appare il popup di avviso.

La registrazione sarà comunque avviata ma sarà solo visualizzata sul grafico. Fermando o uscendo dalla funzione i dati verranno cancellati.

Per inserire la microSD-Card, prima scollegare il cavo USB (se in uso), poi aprire il coperchio del vano batterie, rimuovere la Batteria o le Pile. (vedi anche capitolo DESCRIZIONE STRUMENTO - Apertura/Chiusura Vano Batterie).

Avviata la registrazione, appare il grafico dei valori in tempo reale.

Agire su <-- per tornare indietro, oppure <-- per fermare la registrazione.

Con la microSD-Card inserita per ogni ciclo di registrazione, sarà creato un singolo file in formato CSV compatibile con Excel.

I file saranno inseriti nella cartella "**datalogger**" e ogni nome file contiene DATA_ORA.csv (valori separati da ;).

Aprendo i file con Excel, i dati appariranno in questa forma:

h:m:s	P1	TInt	P2	TInt	TExt
15:05	0.68	21.16	-0.68	21.16	-999.00
15:05	0.75	21.23	-0.75	21.23	-999.00

Premendo il tasto 🔅 durante la registrazione, viene fermata come se fosse stato premuto il tasto 🗖 .

La scheda microSD-Card conterrà 3 Cartelle:

	datalogger	contiene i file CSV generati dal DATALOGGER
	factory	contiene file di sistema non utilizzabili
Ī	system	contiene i file in formato proprietario dell'ANAGRAFICA e dell'ARCHIVIO



Pag. 18/29

IST-1516.CE01.01

Funzione IMPOSTAZIONI

CE516P / Istruzioni d'uso

OK



TECNOCONTROL S.r.I. - Via Miglioli, 47 20090 SEGRATE (MI) - Tel. 02. 26 92 28 90 - Fax 02. 21 33 734

uno con i dati dell'ANAGRAFICA e un altro con quelli dell'ARCHIVIO. Se nello strumento non fosse inserita la scheda SD-Card, appare il

pop-up di avviso.

ogni salvataggio i due file saranno sovrascritti. I dati Α precedenti non saranno più disponibili.

Pag. 19/29

1

IMPOSTAZIONI – Carica Dati da SD

Serve per trasferire dati dalla scheda microSD-Card alla memoria interna lo strumento.

I dati relativi l'ANAGRAFICA e l'ARCHIVIO sono nella cartella "system" della scheda. *Si consiglia di effettuare una copia della* scheda o nel PC organizzando le cartelle in base le proprie esigenze.

Se nello strumento non fosse inserita la scheda SD-Card, appare il Archivio_bckup.dbk pop-up di avviso come sopra mostrato.

Ogni volta che i dati saranno caricati nello strumento, quelli file principali. precedenti saranno sovrascritti e non saranno più disponibili.

IMPOSTAZIONI - Seleziona Stampante

Serve per selezionare tipi diversi di *"Stampante"* in base a quella disponibile. Attualmente è disponibile solo la **IR Tecnocontrol (ST338**).

IMPOSTAZIONI - Retroilluminazione

Serve per selezionare il livello di luminosità del display e adattarlo alle proprie esigenze e alla luminosità dell'ambiente.

Scelto il valore desiderato agire su **OK** per confermare.

Si ricorda che valori elevati di retroilluminazione riducono la durata della batteria.

IMPOSTAZIONI – Aggiornamento Firmware

Permette di aggiornare il Firmware dello strumento.

- 1-Scaricare dal nostro sito il file in forma compressa (.zip).
- 2-Dopo aver scaricato il file sul PC scompattare il file.
- 3-Installare i driver inseriti nel file scaricato.
- 4-Poi seguire le istruzioni che appaiono sul PC.

Il connettore USB-C deve essere inserito nella presa dello strumento con la parte metallica liscia verso l'alto (l'altro lato ha un segno di giunzione). Se il PC non identificasse la presenza della porta USB, girare il connettore.





Gli aggiornamenti FIRMWARE sono scaricabili dal nostro sito alla pagina del prodotto: ST200PT (Link al prodotto).



system

Anagrafica.dbk

Archivio.dbk

Anagrafica_bckup.dbk

IST-1516.CE01.01

CE516P / Istruzioni d'uso

Pag. 21/29



- 5- Collegare il PC allo strumento con il cavo USB in dotazione e selezionare"Load file"
- 6- Cercare nel PC il file scaricato e scompattato (.hex), selezionare il file (clic sul file) e selezionare "Apri"

U ST200 Updater - V1.0.0.0	U ST200 Updater - V1.0.0.0
Collegare lo strumento con la porta USB	Collegare lo strumento con la porta USB
C:\ST200 UPDATER\ST200PTNewTouch.hex Load file Start update	C:\ST200 UPDATER\ST200PTNewTouch.hex Load file Staft update
Ready	Flash downloading

- selezionando "Start update"
- 7- Avviare l'aggiornamento dello stumento 8- Attendere il carico dell'aggiornamento. Al termine la barra risulterà tutta piena.
- 9- Lo strumento si riavvierà auromaticamente, indicando che l'aggiornamento è stato caricato correttamente. Chiudere sul PC la videata e disconnettere la porta USB.

IST-1516.CE01.01

USO DELLA STAMPANTE

LED: Indicazione stato funzionamento della stampante.

TASTO "MODE": accensione / spegnimento e avanzamento della carta.

- <u>per accendere la stampante</u> premere e rilasciare il tasto, il LED rimarrà acceso.
- per avanzamento carta tenere premuto il tasto.
- <u>per spegnere la stampante</u> premere e rilasciare il tasto, il LED si spegnerà.

ROTOLO CARTA TERMICA:

• <u>per sostituire la carta</u> aprire il vano portarotolo sollevando la finestra trasparente nel punto indicato.

Estrarre il rotolo esaurito e se necessario, con il Tasto Mode espellere la carta residua dalla stampante. Verificare che non ci siano residui di carta. Poi inserire il nuovo rotolo di carta infilando il lembo nella fessura d'introduzione utilizzando il Tasto **Mode** per fare avanzare la carta.





Rimuovere il coperchio del vano batterie situato sul retro della stampante.

Rimuovere le 4 batterie alcaline e inserire le nuove rispettando la polarità indicata.





Per una buona autonomia di stampa, si consiglia utilizzare pile alcaline di qualità.

Rimuovere le pile se la stampante non fosse utilizzata per molto tempo.

Allineamento della Porta IR della stampante con la Porta IR dello strumento per un corretto trasferimento dei dati in stampa.



<u>UNI 7129</u> – Impianti a gas per uso domestico e similari alimentati da rete di distribuzione - Progettazione, installazione e messa in servizio - Parte 1: Impianto interno.

La norma si applica agli impianti domestici e similari che utilizzano gas combustibili (I, II e III famiglia secondo EN 437) alimentati dalla rete di distribuzione (UNI 9165 e UNI 10682). Criteri per costruzione e rifacimenti di impianti interni o parte di essi, asserviti ad apparecchi aventi singola portata termica nominale massima non maggiore di 35 kW.

La prova di tenuta deve essere eseguita prima del collegamento dell'impianto al contatore di gas, prima dell'allacciamento degli apparecchi e prima della messa in servizio. Inoltre, se qualche parte dell'impianto non è a vista (sotto traccia, interrata, ecc.), la prova di tenuta deve essere eseguita prima della copertura di questi tratti di tubazione.

<u>UNI 11137</u> - Impianti a gas per uso domestico e similare. Prescrizioni generali e requisiti per i gas della II e III famiglia. Linee guida per la verifica e per il ripristino della tenuta di impianti interni.

La norma si applica agli impianti domestici e similari da attivare, in esercizio o da riattivare, alimentati con gas combustibili della II famiglia (Gas naturale) e III famiglia (GPL) definiti nella UNI EN 437 e compresi nel campo di applicazione delle UNI 7129, UNI 7131, UNI 8723 e UNI 10738.

La prova di tenuta può essere eseguita in due modi. Per impianti con volume <18dm³, solo con GAS alla pressione di esercizio, è possibile effettuare la PROVA PRELIMINARE. Oppure quella con METODO INDIRETTO.

<u>UNI 11528</u> - Impianti a gas di portata termica maggiore di 35 kW - Progettazione, installazione e messa in servizio.

La norma fornisce criteri per progettazione, installazione e messa in servizio degli impianti civili extradomestici a gas (I, II e III famiglia), o di apparecchi installati in batteria o in cascata con portata termica complessiva maggiore di 35 kW. Si applica anche ai rifacimenti di impianti civili extradomestici o parte di essi. Non si applica agli impianti a gas inseriti in cicli di lavorazione industriale e quelli trattati dalla UNI 8723.

La prova di tenuta deve essere eseguita per gli impianti extradomestici (asserviti ad apparecchi singoli aventi portata termica > 35 kW, oppure ad apparecchi installati in batteria o in cascata con portata termica complessiva > 35 kW)

UNI 7129 - Impianto gas uso domestico

EFFETTUARE LA PROVA DI TENUTA (CON ARIA):

IMPIANTO NUOVO USO DOMESTICO ALIMENTATO A GAS CON PORTATA TERMICA < 35 KW

1. Verificare che l'impianto sia chiuso (rubinetto del gas posto a monte del contatore e rubinetti verso gli utilizzatori).

Collegare l'**ST200PT** in un punto qualunque dell'impianto.

Come indicato nel capitolo PROVA TENUTA GAS, i valori sono preimpostati in funzione della norma, ma se fosse necessario, è possibile modificarli.

Parametro	Valore preimpostato	Note modifica parametro
Volume impianto	Automatico	impostabile: Automatico o Manuale
Pressurizzazione	Automatico	impostabile: Automatico o Manuale
Pressione di prova	120 mbar	Impostabile da 100 a 150 mbar
Stabilizzazione	15 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti
Tempo prova	5 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti
Ripetizioni prova	1	Impostabile da 1 a 3

2. Sull'ST200PT avviare la prova di tenuta.

- 3. Attendere che lo strumento immetta aria nell'impianto, stabilizzi la pressione, porti a termine la prova per il tempo impostato.
- 4. Al termine lo strumento eseguirà i calcoli e mostrerà il risultato della prova (SUPERATA o FALLITA). Stampare e/o memorizzare la prova

Tabella 1 - UNI 7129 Limiti di accettabilità.				
Volume interno impianto	Tempo di prova	Caduta di pressione ammessa		
$Vol \leq 100 \ dm^3$	5 minuti	DPmax=0,5 mbar		
100 < Vol ≤ 250 dm³	5 minuti	DPmax=0,2 mbar		
Vol > 250 dm ³	5 minuti	DPmax=0,1 mbar		

Sli Impianti soggetti a manutenzione per riparazione o modifica dovranno essere ricontrollati ripetendo la Prova di Tenuta come prescrive la norma UNI 7129-1.

UNI 11137 - IMPIANTO GAS

Lo strumento, per questa norma, è in grado di effettuare la **PROVA PRELIMINARE con GAS** e la **PROVA con METODO INDIRETTO (con ARIA o GAS).**

Tabella 2 - UNI 11137 Famiglie gas e Pressioni da utilizzare.				
Gas della I famiglia	Pressione di riferimento per prova con gas (pg)	1 000 Pa		
(Gas manifatturato)	Pressione di prova con aria (p _a)	5 000 Pa		
Gas della II famiglia	Pressione di riferimento per prova con gas (p _g)	2 200 Pa		
(Gas naturale)	Pressione di prova con aria (p _a)	5 000 Pa		
Gas della III famiglia	Pressione di riferimento per prova con gas (pg)	3 000 Pa		
(GPL)	Pressione di prova con aria (p _a)	5 000 Pa		

EFFETTUARE LA PROVA PRELIMINARE (CON GAS):

IMPIANTO DA VERIFICARE CON VOLUME <18dm³ USANDO IL GAS ALLA PRESSIONE DI ESECIZIO.

- 1. Il volume dell'impianto sarà calcolato automaticamente dallo strumento, ma a priori è necessario sapere indicativamente se è < 18 dm³.
- 2. Aprire porte e finestre per ventilare gli ambienti.
- 3. Chiudere il rubinetto generale del gas (posto a monte del contatore, se questo è compreso nella prova, o a valle, se questo è escluso dalla prova).
- Collegare l'ST200PT all'impianto in un punto accessibile e selezionare la Famiglia Gas in uso e se nella prova il Dispositivo Intercettazione (rubinetto generale del gas) è compreso (SI) o escluso (NO).

i Come indicato nel capitolo PROVA TENUTA GAS, i valori sono preimpostati in funzione della norma, ma se fosse necessario, è possibile modificarli.

Parametro	Valore preimpostato	Note modifica parametro
Volume impianto	Automatico	impostabile: Automatico o Manuale
Famiglia Gas	Metano – Famiglia II	Impostabile: Fam. I (Gas città), Fam. II (Metano) o Fam. III (GPL).
Tempo prova	1 min	Automatico (Fam. I e II = 1 min, Fam.III = 2.5 min).
Stabilizzazione	15 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti
Ripetizioni prova	1	Impostabile da 1 a 3
Test Dispositivo Intercettazione	S/	impostabile: SI o NO

5. Riaprire il rubinetto del contatore per immettere gas nell'impianto fino a che la pressione nelle tubazioni non sia stabile, come indicato sopra in Tabella 2 in base alla "Famiglia" di Gas in uso. Poi chiudere il rubinetto contatore (posto a monte del contatore, se guesto è compreso nella prova, o valle, se guesto è escluso dalla prova).

- 6. Sull'ST200PT avviare la prova di tenuta.
- 7. Aspettare che lo strumento stabilizzi la pressione, poi porti a termine la prova per il tempo impostato.
- 8. Al termine lo strumento eseguirà i calcoli e mostrerà il risultato della prova (SUPERATA o FALLITA). Stampare e/o memorizzare la prova.

Tabella 3 - UNI 11137 Limiti di accettabilità.				
Volume interno impianto	Tempo di prova	Caduta di pressione ammessa		
$Vol \le 18 \ dm^3$	15 minuti	DPmax=0,5 mbar		

EFFETTUARE LA PROVA CON METODO INDIRETTO (CON ARIA O GAS):

IMPIANTO DA VERIFICARE O RIATTIVARE UTILIZZANDO ARIA.

- 1. Chiudere il rubinetto generale del gas (posto a monte del contatore, se questo è compreso nella prova, o a valle, se questo è escluso dalla prova).
- Collegare l'ST200PT all'impianto in un punto accessibile e selezionare la Famiglia Gas in uso, il Tipo di Test se sarà eseguito con Gas o con Aria e se nella prova il Dispositivo Intercettazione (rubinetto generale del gas) è compreso (SI) o escluso (NO).

Come indicato nel capitolo PROVA TENUTA GAS, i valori sono preimpostati in funzione della norma, ma se fosse necessario, è possibile modificarli.

Parametro	Valore preimpostato	Note modifica parametro
Volume impianto	Automatico	impostabile: Automatico o Manuale
Pressurizzazione	Automatico	impostabile: Automatico o Manuale
Famiglia Gas	Metano – Famiglia II	Impostabile: Fam. I (Gas città), Fam. II (Metano) o Fam. III (GPL).
Tipo Test	Gas	impostabile: Gas o Aria
Stabilizzazione	15 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti
Tempo prova	1 min	Automatico (Fam. I e II = 1 min, Fam.III = 2.5 min)
Ripetizioni prova	3	Impostabile da 1 a 3
Test Dispositivo Intercettazione	SI	impostabile: SI o NO

1. Sull'ST200PT avviare la prova di tenuta.

- 2. Aspettare che lo strumento pressurizzi l'impianto, stabilizzi la pressione, poi porti a termine la prova per il tempo impostato.
- 3. Al termine lo strumento eseguirà i calcoli e mostrerà il risultato della prova (SUPERATA o FALLITA). Stampare e/o memorizzare la prova.

Tabella 4 - UNI 11137 Limiti di accettabilità.					
Famiglia		Dispersione			
lell	Q _t ≤ 1 dm³/h	$1 < Q_t \le 5 \text{ dm}^3/h$	Q _t > 5 dm ³ /h	1 minuto	
III (GPL)	$Q_t \le 0,4 \text{ dm}^3/h$	$0,4 < Q_t \le 2 \text{ dm}^3/h$	Q _t > 2 dm ³ /h	2,5 minuti	
	Impianto a norma	Impianto agibile ma occorre eseguire la manutenzione entro 30 giorni.	Chiusura dell'impianto		

 \wedge

Gli Impianti soggetti a manutenzione per riparazione o modifica dovranno essere ricontrollati ripetendo la Prova di Tenuta come prescrive la norma UNI 7129-1.

UNI 11528 - IMPIANTO GAS

Tipologia dell'Impianto	Pressione di prova	Tempo di prova
6a specie non interrato	1 bar	4 ore
6a specie interrato	1 bar	24 ore
7a specie non interrato	0,1 bar	30 minuti
7a specie interrato	1 bar	30 minuti

EFFETTUARE LA PROVA DI TENUTA (CON ARIA):

IMPIANTI CIVILI EXTRADOMESTICI CON APPARECCHI SINGOLO O IN BATERIA O IN CASCATA ALIMENTATI A GAS CON PORTATA TERMICA COMPLESSIVA > **35 KW**.

- 1. Verificare che l'impianto sia chiuso.
- 2. Collegare l'**ST200PT** all'impianto in un punto accessibile e selezionare la Tipologia Impianto in uso "*Specie Impianto*".

i Come indicato nel capitolo PROVA TENUTA GAS, i valori sono preimpostati in funzione della norma, ma se fosse necessario, è possibile modificarli.

Parametro	Valore preimpostato	Note modifica parametro
Specie Impianto	6a specie non interrato	impostabile: 6a specie non interrato ,6a specie interrato, 7a specie non interrato, 7a specie interrato
Stabilizzazione	15 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti
Tempo prova	4 ore	Automatico (valore in base alla Specie selezionata)
Pressione di prova	1 bar	Automatico (valore in base alla Specie selezionata)

3. Sull'ST200PT avviare la prova di tenuta.

4. Immettere aria nell'impianto tramite compressore o pompa manuale, poi lo strumento, attenderà che si stabilizzi la pressione, poi porterà a termine la prova per il tempo impostato.



Quando nell'impianto si immette aria con un compressore, aumentare la pressione lentamente e in modo progressivo per evitare di sollecitare in modo eccessivo il sensore di pressione dello strumento. **Non superare i valori massimi di pressione dello strumento**.

5. Al termine lo strumento eseguirà i calcoli e mostrerà il risultato della prova (SUPERATA o FALLITA). Stampare e/o memorizzare la prova.

Tabella 5 - UNI 11528 Limiti di accettabilità.

Nessuna perdita di pressione ammessa

PROVA ALTA PRESSIONE

EFFETTUARE LA PROVA DI TENUTA (CON ARIA):

IMPIANTI DIVERSI OVE SIA NECESSARIO EFFETTUARE UNA PROVA DI TENUTA.

- 1. Collegare l'ST200PT all'impianto in un punto accessibile e selezionare i parametri disponibili.
- Come indicato nel capitolo PROVA TENUTA GAS, i valori sono preimpostati in funzione
 - della norma, ma sono tutti modificabili in base al tipo di prova da effettuare.
 - 2. Pressurizzare l'impianto fino al valore

Parametro	Valore preimpostato	Note modifica parametro
Pressione di prova	5000 mbar	Impostabile da 1000 a 5500 mbar
Stabilizzazione	15 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti
Tempo prova	2.5 min	Impostabile a 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 e 1440 minuti

- 3. Sull'ST200PT avviare la prova di tenuta.
- 4. Lo strumento esegue lo zero (Azzeramento), poi sarà richiesto di pressurizzare l'impianto fino al valore impostato.
- 5. Immettere aria nell'impianto tramite compressore o pompa manuale, poi lo strumento, attenderà che si stabilizzi la pressione, poi porterà a termine la prova per il tempo impostato.
- 6. Al termine lo strumento mostrerà il risultato della prova. L'operatore dovrà valutare se considerarla SUPERATA o FALLITA e agire di conseguenza. Stampare e/o memorizzare la prova.

Appendice

CARATTERISITCHE TECNICHE	E
Alimentazione	
Alimentatore / Caricabatteria (Esterno)	Ingresso AC100÷240 / 50÷60Hz Uscita 5VCC / 2A
Batteria intercambiabile e ricaricabile anche separata dallo srumento.	Li-Ion 3,7 V / 5000 mAh
Autonomia batteria ⁽¹⁾	Da 6 a 14 ore in base al tipo di prove effettuate.
Tempo di ricarica	4 ore circa
Pile (in alternativa alla Batteria)	n.4 Pile Alcaline AA (non incluse)
Cavo Alimentatore	Cavo USB con connettore USB-C
Caratteristiche Strumento	
Display	Grafico a colori 240x 320 pixel "Touch Screen" Retroilluminato.
Tastiera	Tasto ON/OFF + Tasti integrati nel display "Touch" resistivo.
Segnalazioni acustiche / altre	Buzzer interno / Vibrazione
Pompa integrata	Capacità di pressurizzazione fino a 600 mbar
Supporto	Magneti integrati
Connessione Sonde Esterne (Opzionali)	Connettore Push-Pull
Connessione Pressione	n.2 Prese maschio (Raccordo Rapido DN-5)
Specifiche di misura	
Pressione Scala LOW	-50 ÷ 600 mbar
Risoluzione Pressione LOW	0,1 mbar
Pressione Scala HIGH	-0,6 ÷ 6 bar
Risoluzione Pressione Scala HIGH	0,1 mbar
Pressione Differenziale	± 1 bar
Risoluzione Pressione Differenziale	0,1 mbar
Calcolo Volume Impianto	Integrato in dm ³
Temperatura Interna	+5 ÷ +40 °C
Risoluzione Temperatura	0,1 °C
Gestione Dati e Interfacce	
Memoria integrata	Flash
MicroSD-Card (non inclusa)	SD e SDHC max 32Gb / SDXC formattate FAT32 max 32Gb.
Stampante supportata (Opzionale)	ST338 Infrarosso (fornita solo con mod.ST200PT/S)
Connessione Dati integrata	Porta USB type C
Connessione Dati (Scheda Opzionale)	Bluetooth + Wi-fi
Condizioni di Utilizzo	
Temperatura/Umidità di funzionamento ⁽²⁾	+5 ÷ +40 °C / 5 to 95% rh
Temperatura/Umidità di stoccaggio (2)	+20 ÷ +50 °C / 5 to 95% rh
Dimensioni e Grado di protezione	210 x 80 x 43 mm IP40
Peso Strumento ⁽¹⁾	circa 500 g
Peso Valigia (completa di accessori)	circa 2 kg

(1) L'Autonomia della batteria è calcolata entro un intervallo minimo e massimo, considerando che in base al tipo di prove effettuate l'energia necessaria può essere molto diversa, soprattutto usando la pompa integrata. Inoltre l'autonomia è influenzata anche dal livello di retroilluminazione del display e possibili effetti quali invecchiamento, temperatura ecc.

(2) Con la batteria Li-lon nello strumento

ĺ

Il Numero di Serie è sia sull'Etichetta di Collaudo posta sul retro dello strumento sia visualizzato a display con la versione Firmware, Hardware (dati visibili all'accensione e sulle videate principali).









TECNOCONTROL S.r.I.Via Miglioli, 47 20090 SEGRATE (MI) Italy- Tel. (+39) 02 26922890 - Fax (+39)02 2133734http: www.tecnocontrol.ite-mail: infoltecnocontrol.it

Carefully read and retain both this instruction manual and the other documents enclosed with this product.

All the reference material associated with this product must be retained as it contains procedures to be carried out in the periodic maintenance and service operations.

INFORMATION AND CAUTIONS DURING USE

Please bear in mind that failure to carry out the maintenance operations can negatively affect the product operation and therefore not ensure its correct operation.

On request, TECNOCONTROL can carry out a periodic check and calibration and issue a Calibration Report.

TECNOCONTROL shall not be liable if the product is modified or used in a way that is non compliant with its intended use, outside its rated operating values or for applications different from those it was intended for.

Each operator is solely responsible for selecting and using the product and must comply with current health and safety standards. The product cannot be used in areas where flammable Ex. classified areas may be present.

The standards, regulations etc. mentioned above are those in force at the time of issuing this document. In any case, all the national standards applicable in the user's country must be complied with.

The information contained in this manual is accurate and updated at the time of its publication and is the result of our ongoing research and development program; the specifications of this product and the information contained in this manual may be changed without notice.

Clock. If there is no power supply, the clock will work with the Lithium Battery which, in normal operating conditions, lasts over 5 years. Should the Lithium battery go flat, the date and time must be reset (see SETTINGS-Date and Time) and the battery replaced with a new one as soon as possible.

Lithium Battery. To ensure a long life and a correct operation, the Lithium battery should never be allowed to go flat, but should be kept at least at 40% of its charge and be fully recharged before use. **Alkaline Batteries.** This type of battery can be used instead of the main battery, if necessary.



DISPOSAL INFORMATION

This product, in accordance with European Directives on waste disposal and reduction in the use of hazardous substances in electrical/electronic equipment must, at the end its life, be disposed of separately from other waste by qualified European recycling centres, or returned to TECNOCONTROL for its disposal.

Correctly recycling and sending the scrapped equipment to a centre where it will be handled and disposed of in an environmentally friendly manner helps to avoid potential damages to the environment and to human health, as well as promoting the re-use and/or recycling of the materials it is made of.

NOTES FOR READING THESE INSTRUCTIONS

ST200PT	The product is supplied in a transport case without PRINTER.	
ST200PT/S	The product is supplied in a transport case complete with PRINTER.	
FIRMWARE	Program installed inside the microcontroller that controls all unit functioning.	
\triangle	Symbol alerting the reader about an important caution of the instructions.	
i	This symbol indicates an additional information or explanation to these instructions.	

Docu	Documento / Document name: IST-3200.PT01.02_ST200PT-EN (20.01.2020).docx				
Ogge	Oggetto / Subject : ST200PT (EN)				
Rev.	Data / Date	Da / By	Notes		
0	20/01/2020	UT/FG	Document issue		

SUMMARY

INTRODUCTION 5 Figure 1 – Transport case content and Spare Part Numbers. 6 INSTRUMENT DESCRIPTION 7 Figure 2 – ST200PT instrument 7 Password 7 Opening/Closing the Battery Compartment 7 Connections 6 Lithium battery (Main power supply) 6 Figure 3 – Li-lon battery BA047 6 Alkaline batteries/alternative power supply) 6 Maintenance 6 Cleaning the Casing 6 <i>TOUCH TYPE DISPLAY</i> 6 KEYS (Touch-Screen): 6 Display – Initial screens 10 Instrument charging 10 Instrument charging 11 Main Menu 11 INSTRUMENT FUNCTIONS 72 Pressure gauge - Caraph 73 GAS Leak test function 74	INFORMATION AND CAUTIONS DURING USE	2
Figure 1 - Transport case content and Spare Part Numbers. INSTRUMENT DESCRIPTION 7 Figure 2 - ST200PT instrument 7 Password 7 Opening/Closing the Battery Compartment 7 Connections 8 Lithhum battery (Main power supply) 8 Figure 3 - Li-lon battery BA047 8 Alkaline batteries(alternative power supply) 8 Maintenance 8 Cleaning the Casing 8 TOUCH TYPE DISPLAY 8 KEYS (Touch-Screen): 9 Dipslay - Thital screens 10 Instrument charging 10 Switching on the instrument 11 Main Menu 11 Misin Wenu 11 Pressure gauge - Claph 12 Pressure gauge - Claph resure 12 GAS leak test function 13	INTRODUCTION	5
INSTRUMENT DESCRIPTION 7 Figure 2 - ST200PT instrument 7 Password 7 Opening/Closing the Battery Compartment 7 Connections 2 Lithium battery (Main power supply) 2 Figure 3 - Li-lon battery BA047 2 Alkaline batterise/alemative power supply) 2 Maintenance 2 Cleaning the Casing 2 TOUCH TYPE DISPLAY 2 KEYS (Touch-Screen): 2 Display - Initial screens 10 Instrument charging 10 Switching on the instrument 11 Switching on the instrument 11 Main Menu 11 INSTRUMENT FUNCTIONS 12 Pressure gauge - Graph 12 GAS leak test function - Start Test 14 GAS leak test function 15 GAS leak test function 16	Figure 1 – Transport case content and Spare Part Numbers.	6
Figure 2 = ST200PT instrument 7 Password 7 Opening/Closing the Battery Compartment 7 Connections 8 Lithium battery (Main power supply) 8 Hiltmin battery BA047 8 Maintenance 8 Cleaning the Casing 8 TOUCH TYPE DISPLAY 9 Set (Touch-Screen): 9 Display - Initial screens 10 Instrument charging 11 Main Menu 11 Main Menu 11 Misin Menu 11 Misin Menu 11 Main Menu 11 Main Menu 11 Main Menu 11 Pressure gauge function (Manometer) 12 Pressure gauge - Graph 12 Pressure gauge - Graph 12 Pressure gauge - Graph 12 Pressure gauge - Start Test 14 GAS leak test function 15 Gas Leak Test - Saving Preset Test 1 or 2 14 GAS leak test function 16 REGISTRY DATA - Customer list 16 <	INSTRUMENT DESCRIPTION	7
Password7Opening/Closing the Battery Compartment7Connections2Lithium battery (Main power supply)2Figure 3 - Li-lon battery BA0472Akaline batteries(alternative power supply)2Maintenance2Cleaning the Casing2TOUCH TYPE DISPLAY2KEYS (Touch-Screen):2Display - Initial screens10Instrument charging10Display - Initial screens11Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge - Relative Pressure12Pressure gauge - Craph12Pressure gauge - Craph12Pressure gauge - Differential Pressure12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 215Gas Leak Test - Saving Preset Test 1 or 216Gas Leak Test - Saving Preset Test 1 or 216Gas Leak Test - Saving Preset Test 1 or 216Gas Leak Test - Saving Preset Test 1 or 216Gas Leak Test - Saving Pre	Figure 2 – ST200PT instrument	- 7
Opening/Closing the Battery Compartment7Connections2Lithium battery (Main power supply)2Figure 3 - Li-lon battery BA0472Arkaline batteries (alternative power supply)2Maintenance2Cleaning the Casing2 COUCH TYPE DISPLAY 3 KEYS (Fouch-Screen): 3Display - Initial screens10Instrument charging10Display - Initial screens11Switching on the instrument11Main Menu11 INSTRUMENT FUNCTIONS 12Pressure gauge - Relative Pressure12Pressure gauge - Caph12Pressure gauge - Caph12Pressure gauge - Caph12Pressure gauge - Caph12GAS leak test function13GAS leak test function14GAS leak test function16GAS leak test function16GAS leak test Print16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16SETTINGS - Language15SETTINGS - Load Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Savester for domestic use22USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22SETTINGS - Backlighting22SETTINGS - Savester for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129	Password	7
ConnectionsELiftium battery (Main power supply)EFigure 3 - Li-Ion battery BA047EAlkaline batteries(alternative power supply)EMaintenanceECleaning the CasingETOUCH TYPE DISPLAYEKEYS (Touch-Screen):EDisplay - Initial screens10Instrument charging10Display - Initial screens11Switching on the instrument11Maintenance12Pressure gauge (Inction (Manometer))12Pressure gauge - Relative Pressure12Pressure gauge - Oraph12Pressure gauge - Differential Pressure12Pressure gauge - Differential Pressure14Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function15REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16SETTINGS - Language15SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD	Opening/Closing the Battery Compartment	7
Lithum battery (Main power supply) Figure 3 Figure 3 Lithon battery BAO47 Aikaline batteries(alternative power supply) E Maintenance E Cleaning the Casing E TOUCH TYPE DISPLAY E KEYS (Touch-Screen): E Display – Initial screens 11 Instrument charging 10 Display – START-UP screens 11 Switching on the instrument 11 Main Menu 11 INSTRUMENT FUNCTIONS 12 Pressure gauge - Relative Pressure 12 Pressure gauge - Infiferential Pressure 12 Pressure gauge - Differential Pressure 12 Pressure gauge - Differential Pressure 12 GAS leak test function 13 Gas Leak Test - Saving Preset Test 1 or 2 14 GAS leak test - Print 15 REGISTRY DATA - Customer list 16 SETTINGS - Language 19 SETTINGS - Load Dat	Connections	8
Figure 3 = L1-IOI Datery BA047CommentAkaline batterise(alternative power supply)SetMaintenanceSetCleaning the CasingSet KEYS (Fouch-Screen): SetDisplay – Initial screens10Instrument charging10Display – START-UP screens11Switching on the instrument11Main Menu11 INSTRUMENT FUNCTIONS 12Pressure gauge function (Manometer)12Pressure gauge - Graph12Pressure gauge - Olifferential Pressure12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function15GAS leak test function16GAS leak test - Print15REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16SETTINGS - Language15SETTINGS - Save Data onto the SD16SETTINGS - Save Data onto the SD16SETTINGS - Saytems for domestic use22VIN GTLP - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Lithium battery (Main power supply)	8
Maintenance E Cleaning the Casing E TOUCH TYPE DISPLAY S KEYS (Touch-Screen): S Display – Initial screens 10 Instrument charging 10 Display – Initial screens 11 Mainte muther 11 Maint Menu 11 INSTRUMENT FUNCTIONS 12 Pressure gauge function (Manometer) 12 Pressure gauge - Caraph 12 Pressure gauge - Caraph 12 Pressure gauge - Caraph 12 GAS leak test function 13 GAS leak test function 14 GAS leak test function 15 GAS leak test function 16 GAS leak test function 16 GAS leak test - Print 16 REGISTRY DATA - Customer list 16 REGISTRY DATA - Customer list 16 REGISTRY DATA - Keyboard 16 ARCHIVE function 17 SETTINGS - Language 19 SETTINGS - Load Data onto the SD 20 SETTINGS - Save Data onto the SD 20	Figure 3 – Li-Ion Dallery BA047 Alkalina battarias/altarnativa powor supply)	8
Cleaning the CasingSectionCleaning the CasingSectionCleaning the CasingSectionCNUCH TYPE DISPLAYSectionKEYS (Touch-Screen):SectionDisplay – Initial screens10Instrument charging10Display – START-UP screens11Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge – Relative Pressure12Pressure gauge – Relative Pressure12Pressure gauge – Craph12Pressure gauge – Offerential Pressure12Pressure gauge – Offerential Pressure12Pressure gauge – Offerential Pressure12Pressure gauge – Craph12Pressure gauge – Craph12Pressure gauge – Craph12Pressure gauge – Craph12Pressure gauge – Craph12Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Test Report15GAS leak test - Print16GAS leak test - Print16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function16SETTINGS - Date and Time19SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Select Printer22SETTINGS - Backlighting22SETTINGS - Select Printer22SETTINGS - Select Prin	Maintenance	8
TOUCH TYPE DISPLAYSKEYS (Touch-Screen):10Display – Initial screens10Instrument charging10Display – START-UP screens11Main Menu11Main Menu11Main Menu11Main Menu12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Relative Pressure12Pressure gauge - Oifferential Pressure12Pressure gauge - Oifferential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test Function16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16SETTINGS - Language19SETTINGS - Language19SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Select Printer22R PRINTER - Replacing the alkaline batteries22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 -	Cleaning the Casing	8
KEYS (Touch-Screen):25Display – Initial screens10Instrument charging11Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Relative Pressure12Pressure gauge - Differential Pressure12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Test Report15GAS leak test function16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Sakelighting22SETTINGS - Sakelighting22SETTINGS - Sakelighting22SETTINGS - Sakelighting22SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Sakelighting22SETTINGS - Sakelighting22 </td <td></td> <td>9</td>		9
Display - Initial screens10Display - START-UP screens11Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Graph12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function15GAS leak test - Test Report16GAS leak test - Print15REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function17SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Update Firmware20SUNG THE PRINTER22<	KEVS (Touch-Screen):	9
Instrument charging10Display - START-UP screens11Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Solfferential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Saket Printer20SETTINGS - Saket Printer20SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Saket Printer20SETTINGS - Saket Printer20SETTINGS - Saket Printer20SETTINGS - Saket Printer20SETTINGS - Save Data onto the SD20SETTINGS - Update Firmware20SETTINGS - Update Firmware20SETTINGS - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be us	Display – Initial screens	10
Display - START-UP screens11Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Oifferential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214Gas Leak Test - Test Report15GAS leak test - Print16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16SETTINGS - Language15SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Salect Printer20SETTINGS - Salect Printer20SETTINGS - Salect Printer20SETTINGS - Save Data onto the SD20SETTINGS - Salect Printer20SETTINGS - Salect Printer <td< td=""><td>Instrument charging</td><td>10</td></td<>	Instrument charging	10
Switching on the instrument11Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Craph12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Trint16GAS leak test - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Skeyboard16ARCHIVE function17SETTINGS - Language19SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting22SETTINGS - Backlighting22SETTINGS - Backlighting22SETTINGS - Update Firmware22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Display – START-UP screens	11
Main Menu11INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Graph12GAS leak test function13Gas Leak test function - Start Test14GAS leak test function - Start Test14GAS leak test function15GAS leak test function15GAS leak test function15GAS leak test function16GAS leak test function16GAS leak test rest - Test Report16GAS leak test - Vrint16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function17SETTINGS - Language19SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Update Firmware22USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22USING THE PRINTER24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Switching on the instrument	11
INSTRUMENT FUNCTIONS12Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function17SETTINGS function19SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Backlighting20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Main Menu	11
Pressure gauge function (Manometer)12Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16ARCHIVE function16DATA LOGGER function17SETTINGS - Language19SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Update Firmware20UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	INSTRUMENT FUNCTIONS	12
Pressure gauge - Relative Pressure12Pressure gauge - Graph12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY Function16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function17SETTINGS - Language19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD20SETTINGS - Save Data onto the SD20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Backlighting22USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Pressure gauge function (Manometer)	12
Pressure gauge - Differential Pressure12Pressure gauge - Differential Pressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14GAS leak test - Test Report15GAS leak test - Test Report15GAS leak test - Print16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function17SETTINGS - Language19SETTINGS - Language19SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTERIR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.25Table 2 - UNI 11137 Gas families and pressures to be used.25	Pressure gauge - Relative Pressure	12
Fressure gauge - Differential Fressure12GAS leak test function13Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16ARCHIVE function16DATA LOGGER function17SETTINGS function19SETTINGS - Language19SETTINGS - Language19SETTINGS - Language20SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.25Table 2 - UNI 11137 Gas families and pressures to be used.25	Pressure gauge - Graph Pressure gauge - Differential Pressure	12
Gas Leak Test - Saving Preset Test 1 or 214GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY Function16REGISTRY DATA - Customer list16REGISTRY DATA - Customer list16ARCHIVE function16DATA LOGGER function17SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Select printer20SETTINGS - Select printer20SETTINGS - Select printer20SETTINGS - Backlighting20SETTINGS - Select printer20SETTINGS - Update Firmware20UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	GAS leak test function	12
GAS leak test function - Start Test14Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY Function15REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function17SETTINGS function17SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Gas Leak Test - Saving Preset Test 1 or 2	14
Gas Leak Test - Test Report15GAS leak test - Print15REGISTRY Function16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function17DATA LOGGER function17SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.25Table 2 - UNI 11137 Gas families and pressures to be used.25	GAS leak test function - Start Test	14
GAS leak test - Print15REGISTRY Function16REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function17SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24Table 2 - UNI 11137 Gas families and pressures to be used.25	Gas Leak Test - Test Report	15
REGISTRY Function15REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function17SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Date and Time19SETTINGS - Load Data onto the SD20SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	GAS leak test - Print	15
REGISTRY DATA - Customer list16REGISTRY DATA - Keyboard16ARCHIVE function16DATA LOGGER function17SETTINGS function17SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	REGISTRY Function	15
REGISTRY DATA - Reyboard10ARCHIVE function16DATA LOGGER function17SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER20IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	REGISTRY DATA - Customer list	16 16
DATA LOGGER function17DATA LOGGER function17SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25	APCHIVE function	10
SETTINGS function19SETTINGS function19SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25	DATA LOGGER function	10
SETTINGS - Language19SETTINGS - Date and Time19SETTINGS - Date and Time19SETTINGS - Save Data onto the SD20SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS function	19
SETTINGS - Date and Time19SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS - Language	19
SETTINGS - Save Data onto the SD19SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS - Date and Time	19
SETTINGS - Load Data onto the SD20SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS - Save Data onto the SD	19
SETTINGS - Select Printer20SETTINGS - Backlighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS - Load Data onto the SD	20
SETTINGS - Dacklighting20SETTINGS - Update Firmware20USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS - Select Printer	20
USING THE PRINTER22IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	SETTINGS - Update Firmware	20
IR PRINTER - Replacing the alkaline batteries22UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25		20
UNI 7129 - Gas systems for domestic use24Carry out the leak test (with Air): Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM Table 2 - UNI 11137 Gas families and pressures to be used.25	IR PRINTER - Replacing the alkaline batteries	22
Carry out the leak test (with Air):24Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	UNI 7129 - Gas systems for domestic use	24
Table 1 - UNI 7129 Limits of acceptability.24UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Carry out the leak test (with Air):	24
UNI 11137 - GAS SYSTEM25Table 2 - UNI 11137 Gas families and pressures to be used.25	Table 1 - UNI 7129 Limits of acceptability.	24
Table 2 - UNI 11137 Gas families and pressures to be used.25	UNI 11137 - GAS SYSTEM	25
	Table 2 - UNI 11137 Gas families and pressures to be used.	25
Carry out the preliminary test (with Gas):25Table 3 - UNI 11137 Limits of acceptability.25	Carry out the preliminary test (with Gas): Table 3 - UNI 11137 Limits of acceptability.	25 25
Carry out the test with the indirect method (with Air or Gas):26Table 4 - UNI 11137 Limits of acceptability.26	Carry out the test with the indirect method (with Air or Gas): Table 4 - UNI 11137 Limits of acceptability.	26 26

IST-1516.CE01.01	CE516P / User Instructions	Page 4/29
UNI 11528 - GAS SYSTEM		27
Carry out the leak test (with Air): Table 5 - UNI 11528 Limits of ac	ceptability.	27 27
HIGH PRESSURE TEST		28
Carry out the leak test (with AIR)	:	28
Appendix		29
TECHNICAL SPECIFICATIONS		29
Instrument features		29 29 20
Data and interface management Operating Conditions		29 29 29

INTRODUCTION

- The ST200PT is an electronic pressure gauge that can be used both for system leak tests and for static, dynamic and differential pressure measurements, with indication of minimum and maximum value measured.
- The equipment can carry out other measurements by means of optional external probes.
- It automatically measures the volume of a system if not already known to the operator.
- During the tests, it compensates for the changes of ambient temperature.
- Automatic or manual reset
- It displays the graph of the measurement in real time.
- Parameters can be programmed by the operator according to their requirements.
- With built in Clock and Calendar
- With built-in measurement Data-Logger function.
- It has an archive than can be exported/imported on a microSD-Card, which allows to manage the tests reports with the information supplied by the customer and the engineer who carried out the tests.
- ST200PT can carry out the leak tests in manual mode or by using the preset parameters, in compliance with the following standards:

- <u>UNI 11137</u> Gas systems for domestic use and similar systems. General prescriptions and requirements for gas families 2 and 3. Guidelines for inspecting and resetting the gas tightness of indoor systems.
- <u>UNI 11528</u> Gas systems with heat output exceeding 35 kW Design, installation and commissioning.

All parameters preset in the equipment are based on compliance with both Italian (UNI) and European standards (EN). Should the instrument be used abroad or for different standards, the test parameters may be changed within the limits preset for each type of test. Should you have any queries, please contact Tecnocontrol.

THE LEAK TESTS MUST ONLY BE CARRIED OUT BY QUALIFIED AND AUTHORISED STAFF, ACCORDING TO THE REQUIREMENTS OF THE STANDARDS APPLICABLE FOR THE SYSTEM BEING TESTED.

THE OPERATOR IS RESPONSIBLE FOR KNOWING AND CORRECTLY APPLYING SUCH STANDARDS.

ACCORDING TO THE SELECTED TEST, THE FORMULAS AND CALCULATIONS CARRIED OUT BY THE INSTRUMENT COMPLY WITH THE RELEVANT STANDARDS LISTED ABOVE AND UPDATED WHEN THE INSTRUMENT WAS MANUFACTURED. THE ADDITION OF OTHER LEAK TESTS OR OF ANY UPDATES OF TECHNICAL STANDARDS OR OF OTHER INSTRUMENT FUNCTIONS WILL REQUIRE THE FIRMWARE TO BE UPDATED(see <u>SETTINGS – Update Firmware</u>).

<u>UNI 7129</u> Gas systems for domestic use and similar systems supplied by mains gas - Design, installation and commissioning - Part 1: Indoor system.

IST-1516.CE01.01

CE516P / User Instructions

Page 6/29

• The transport case my contain:



Figure 1 – Transport case content and Spare Part Numbers.

IST-1516.CE01.01

INSTRUMENT DESCRIPTION



Figure 2 – ST200PT instrument

Password

Some of the functions of the instrument are protected by a Code (max. 6 numbers), reserved to authorised people:

<u>"FACTORY"</u>: This menu is accessible only to Tecnocontrol for the factory settings. Opening/Closing the Battery Compartment

The back of the instrument features a cover that can be opened to access the Battery Compartment, the microSD-Card and the optional cards. The snap-on cover is opened by pressing on the knurled area and then sliding it downwards.



Before opening the Battery Compartment, if the Battery is in use, disconnect the USB cable. It the cable is not removed, the instrument can be irreversibly damaged.

Connections

USB-C Port: it is located on the left hand side of the instrument, protected by the rubber flap with the symbol • the PC, to load any Firmware updates and for future use.

 P_1 and P_2 pressure connections: located on the top of the instrument, they are the inputs for the pressure / leak measurements. The PL socket is the input for low pressures from -50 to +600 mbar (Low). The P_H socket is the input for pressures from -0.6 to +6 bar.

Push-pull connector for external probes: located on the top, it is provided to connect the external probes.

Lithium battery (Main power supply)

The top right hand corner of the display shows the battery status.

ſ	0	Low battery. Recharge the batter	v immediatelv to	prevent the instrument from	switching off.
L			,		•••••••••••••••••••••••••••••••••••••••

	Battery half full
ø	Battery charging
∎ر	Instrument without battery, powered from the mains by means of an external power supply and a
-	type C USB cable.

The Lithium Battery can be recharged even if it is disconnected from the instrument. The battery is charged by using the USB-C port; whilst charging, the LED will be orange; when the charge is completed, the LED will turn green.

Externally recharge the Lithium Battery; it allows the instrument to be used with a 2nd battery or with Alkaline batteries.

If necessary, the Lithium Battery can also be recharged on vehicles by connecting the USB cable to a suitable adaptor for mobile phones with a 5VDC / 2A output.



Figure 3 – Li-Ion battery BA047

Alkaline batteries(alternative power supply)

If necessary, the instrument can also operate with 4 AA alkaline batteries, but only for a limited time (30 to 90 minutes, as the alkaline batteries have a lower capacity than Lithium ones).

Please remember that to use alkaline batteries you need to remove the lithium battery. We recommend that good quality batteries are used in order to ensure a longer life; please remember that the batteries must be removed if the instrument is not used for a long time.



Rechargeable AA batteries can also be used, provided that they are recharged only externally, with a suitable battery charger.

Maintenance

Calibration check: once a year, we recommend that the instrument is subjected to a complete overhaul by sending it to TECNOCONTROL, who will carry out a functional check of the instrument and its periodic calibration, issuing a Calibration Report.

Connectors: periodically check that the CONE, the TUBE, the various FITTINGS and their SEALS are clean and in good conditions to ensure the pressure tightness during the tests. We recommend that they are replaced when worn, flattened or cracked.

Pressure connections (P_L/P_H): Make sure that no dirt or humidity is allowed to enter the pressure measurement connectors.

Electrical connectors: make sure that no dust or liquids enter the external probe connector or the USB port.

Battery: if the instrument is not used for long periods of time, periodically recharge (t least every 3 months) the lithium battery because, if it goes completely flat (discharge), it will damage the instrument.

<u>Printer</u>: if the printer is not used for long periods of time, please remove the batteries.

Cleaning the Casing

To clean the surface of the instrument casing, use a dry and soft cloth; do not use solvents or abrasive detergents, especially on the display.

USING THE

TOUCH TYPE DISPLAY

The display is a 240x 320 pixel "Touch" type resistive colour display.

KEYS (TOUCH-SCREEN):

The outside of the instrument, on its right side, is fitted with one key only to switch the instrument on and off.

All the other available keys are "tactile" keys, available on the "Touch-Screen" according to the function being used. Most of the function keys are displayed in the top or bottom section of the display; the other keys, provided for specific functions, are active on the entire display.

The keys can be activated by pressing on the display; for best results, a finger nail or any pen suitable for displays with rubber can be used.

Every time the touch screen is pressed, to warn the user of the selected action, the internal buzzer will sound a short beep, but the touch key will turn green only when the key has been correctly pressed, or to highlight that a function is being carried out (ex. during printing)

<u></u>	A pop-up windows will appear, containing a brief description of the current function.
	Redisplays the <i>Main menu</i> from any screen.
\sim	Forward, scrolls the pages, if available.
$\langle f \rangle$	Backward, scrolls the pages, if available.
\triangleright	Start, starts a test or enables a function.
ĴĴ	Saves the data entered and, where required, stores it in the memory or saves it on the SD-Card.
ද්ටිර	Settings of the instrument or of the current function.
ZERO	Resets the value to zero, where required.
	Print, sends the data to the set-up (external) printer.
	Delete, deletes the data entered associated with the current function.
μ. Γ	Inserts or Edits the company Identification Data.
8 <u>=</u> 6	Enters or Edits the selected Customer/Operator Master Data.
	Displays the selected report.
ს	On/Off key (only with the instrument off, charging).
	Cursor, indicates that the user can scroll through the data displayed on the screen.
Ο	Starts the Data-Logger function
	Stops the Data-Logger function

CE516P / User Instructions

Display – Initial screens

Instrument charging

When the instrument is off, but is connected to the power supply by means of the cable to the **USB PORT (TYPE C)**, the display shows that the battery is being charged.

The display shows that the lithium battery is being recharged, gradually turning the symbol completely green.

If alkaline batteries are inserted, the symbol will remain empty (as shown in the picture to the side) and the recharging function will not be enabled.

When the lithium battery is fully charged, the display graphically shows that the battery has reached its maximum charge.

From this screen the user can also switch the instrument on by pressing the touch key ().

The instrument, if connected to the power supply by means of the cable to the **USB PORT** (TYPE C), can operate even if the lithium battery is not inserted or if the alkaline batteries are flat or not fitted.

The instrument can also be recharged on vehicles by connecting the USB cable to a suitable adaptor with a 5VDC / 2 A output, such as those used for mobile phones. (See paragraph "Lithium battery").





Display – START-UP screens

Switching on the instrument

The instrument is switched on and off with the **ON/OFF KEY** located on the right side of the instrument (See Fig.1).

When it is switched on, the instrument loads the program both graphically and with a sequential numeric count (from 0 to 100).

The display shows, as well as a product Number, the version of the Firmware (**FW**) installed, the version of the PCB fitted (**HW**) and the Serial Number (**S/N**) that uniquely identifies it.

<u>Main Menu</u>

ĺ

When the start-up time has expired, the *main screen* will appear, showing the menus with the available functions, divided by pages.

On the top left hand side there is a clock showing the hours, minutes and date, whilst the right icon shows the charging level of the battery **o** or if the instrument is connected to the mains power, **r** but

only without batteries fitted or working.

The first page shows the first 4 touch keys.

The "1" and "2" menu keys are used to directly access the preset functions, which can be programmed by the user according to their requirements (see the next chapter).

The other 2 menu keys are provided to access the **MANOMETER** function and the **GAS** leak tests.

At the bottom of the screen (touch keys area), press \rightarrow to change page and view the other menu keys.

This page contains 4 additional keys to manage the data associated with the **REGISTRY**, **ARCHIVE**, **DATALOGGER** and, lastly, the instrument **SETTINGS** (See the relevant chapters that follow).

At the bottom of the screen (touch keys area) press \triangleleft to go back.

In the pages with the touch keys bar at the top ? it displays a brief explanation and ? redisplays the **Main menu**.







CE516P / User Instructions

INSTRUMENT FUNCTIONS



Pressure gauge function (Manometer)

From the main menu, press the key to access the Pressure gauge function. By pressing the key the Pressure measuring method can be changed, from to Differential pressure (See further in the chanter)

Relative P to Differential pressure (See further in the chapter).



Pressure gauge - Relative Pressure The PRESSURE CONNECTION P_L is used

The key *ZERO* allows the user to reset to value to zero before starting the measurement.

Make sure the instrument pressure limits are not exceeded. Pressures exceeding the sensor operating limits could cause it to break.

Pressure gauge - Graph

The graph is also a key; if enabled, it improves the display (Focus ON) by centering the scale on the current measurement.

If necessary press the key to print the measured value (**Pres.**), the minimum (**Pmin**) and the maximum (**Pmax**) value an the test temperature (**Temp.**).

The key <-- stops the test and redisplays the main men.



Before pressing switch on the printer or, if the IR printer has been set up, it must be aligned to the IR PORT of the instrument.

Pressure gauge - Differential Pressure

Differential P:------ uses both **PRESSURE CONNECTION** P_L and P_H . The keys, the graph and the indicators are the same as those described in the previous chapter, which deals with the Relative Pressure.



CE516P / User Instructions

14:35 15 Nov 19



At the bottom of the screen (touch keys area) press \leq to go bac to go to the next page, press \sim

Each line is a key; press the key to access the matching selection and change the value, if necessary (only if the change is allowed and is within the limits permitted by the standard for the test and standard selected).

In the example to the side, after selecting "**Operator**" a pop-up window will appear, with the list of previously saved operator's names. Scroll through the list by swiping on the window, the press OK to confirm.

In the second page, the list of available data is continued.

If the data is as requested, you may:

Save it by pressing 🔚 as **Preset Test 1**" or "**Preset Test 2**".

Start the test by pressing the key \triangleright .





ST200PT

OK

Connect the instrument

to the plant on P1

pressure port

Gas Leak Test - Saving Preset Test 1 or 2

From the previous screen, if the data shown is as requested, it can be saved by pressing and used as "**Preset test 1**" or "**Preset Test 2**".

This selection allows the user to repeat the test or to speed up repetitive tests by accessing the test directly from the main menu.

In keys **1** and/or **2** a short description of the preset type of test will be displayed.

If the **Manual** method has been selected in the **System volume** parameters or in **Pressurizing**, a screen will appear, where the value can be entered by using the touch keyboard.

GAS leak test function - Start Test

After starting the test by pressing key a pop-up window will appear, which suggests which **PRESSURE CONNECTION** to be used for that test.

After accepting the recommended socket by pressing "**OK**", the test will be started.

The display shows the time $(\mathbf{m} : \mathbf{s})$ left until the test is completed; under the measured pressure value, there is a brief message

describing the current operation. Below the graph, the operation progress is displayed in real time.

WaitPressurizingThe pump is taking the system to the requestedpressure.Stabilizingtime required to stabilize the pressure entered.Executing ...Calculation in progress

The messages displayed can be different according to the test and standard selected.











REGISTRY Function

From the main menu, press this key to access the **REGISTRY DATA** function.

From here, your **CUSTOMERS LIST** can be managed.

By pressing the **OPERATORS LIST** is accessed (where *the items are Surname, Name and Serial No.* = operator's number). Or press to go back.

Press to access the **COMPANY data** (the following items are included: **Company, Address, TC/VAT no., POSTCODE, City, Gas Meter S/N and Notes**).

To scroll through the items, swipe with a finger to the centre of the display or use the letters shown to the side to search a surname.

To enter a new Customer/Operator, press on the first empty line available.

The line will turn green to highlight its selection.

Press si in order to enter a new Customer, Operator.

1	14:35	15 Nov 19		
	?	Custo	omer List	$\widehat{\mathbf{A}}$
	1 SU	RNAME NAI	ME	AB CD
	2			EF
	3			GH
	4]J
i	-			
	5			
	6			ST
l	7			UV
	8			wx
1	-			YZ
	5	r S	8= /	

IST-1516.CE01.01	CE516P / User Instructions		Page	e 16/29
		14:35 15 N	lov 19	
REGISTRY DATA - Custon	ner list	?	Customer	\bigcirc
After pressing the key 🗵 , the	e CUSTOMER data will be displayed.	Surname:		
Each line is a key, press on the	line to access and enter the requested	Name:		
item. The touch screen will appe	ear to allow the user to enter the text.	Company:		
Surname, Name, Company, A	Address, TC/VAT (Tax Code or VAT	Address:		
number), POSTCODE, Town,	, Gas Meter S/N (Gas meter serial	TC/VAT:		
number) and any Notes (max. I		Postcode:		
At the bottom of the screen (tou	uch keys) press < to go back; if the	City:		
parameters are those requested	d, they can be saved by pressing \square ,	Gas Meter	S/N:	
or deleted by pressing in .		Notes:		<u> </u>
		5		
<u>REGISTRY DATA - Keyboa</u>	ard		Name	
REGISTRY DATA - Keyboard To change the keyboard from le	<u>ard</u> ower to upper characters, press 🔒		Name	
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the	ard ower to upper characters, press ① e key again to enter your selection.	The tex	Name t entered v	vill
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space	ard ower to upper characters, press e key again to enter your selection. between characters.	The tex	Name tt entered v d e f	vill g h i
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space of The key < deletes the char	ard ower to upper characters, press ① e key again to enter your selection. between characters. acters entered.	The tex	Name tt entered v d e f	vill ghi
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space le The key < deletes the char Every time the key 1@A is pr	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will	The tex a b c j i l	Name tt entered v d e f m n o	vill ghi pqr
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space le The key < deletes the char Every time the key 1@A is pr be displayed 0, 1 to 9, then the will be displayed followed by	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will e first set of symbols ! \$ % & / () = *.	The tex a b c jil s t u	Name tt entered v d e f m n o v w x	vill ghi pqr yz
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space of The key deletes the char Every time the key 1@A is pr be displayed 0, 1 to 9, then the will be displayed followed by @, . Then the keyboard will rec	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will e first set of symbols ! \$ % & / () = * . o the remaining symbols< > ? : + # display the characters.	The tex a b c j i l s t u	Name tt entered v d e f m n o v w x	vill ghi pqr yz
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space of The key < deletes the char Every time the key 1@A is pr be displayed 0, 1 to 9, then the will be displayed followed by @, . Then the keyboard will rec Press OK to enter the var	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will e first set of symbols ! \$ % & / () = * . the remaining symbols< > ? : + # display the characters. lue; press EXIT to go back without	The tex a b c jil s t u	Name t entered v d e f m n o v w x	vill ghi pqr yz
REGISTRY DATA - Keyboa To change the keyboard from le (it will turn green) then press the The key inserts a space of The key <=> deletes the char Every time the key 1@A is pr be displayed 0, 1 to 9, then the will be displayed followed by @, . Then the keyboard will rec Press OK to enter the val entering any value.	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will e first set of symbols ! \$ % & / () = * . the remaining symbols< > ? : + # display the characters. alue; press EXIT to go back without	The tex a b c j i l s t u	Name tt entered v d e f m n o v w x 1 @ A	vill ghi pqr yz
REGISTRY DATA - Keyboard To change the keyboard from let (it will turn green) then press the The key inserts a space I The key deletes the char Every time the key 1@A is pr be displayed 0, 1 to 9, then the will be displayed followed by @, . Then the keyboard will red Press OK to enter the value. Please remember that a	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will e first set of symbols ! \$ % & / () = * . r the remaining symbols< > ? : + # display the characters. lue; press EXIT to go back without touch key will turn green when it is	The tex a b c j i l s t u	Name tt entered v d e f m n o v w x 1 0 1 0 A	vill ghi pqr yz
REGISTRY DATA - Keyboard To change the keyboard from let (it will turn green) then press the The key inserts a space I The key deletes the char Every time the key 1@A is probe displayed 0, 1 to 9, then the will be displayed followed by @, . Then the keyboard will record Press OK To enter the value. Please remember that a pressed, to highlight that the	ard ower to upper characters, press e key again to enter your selection. between characters. acters entered. ressed, the keyboard with numbers will e first set of symbols ! \$ % & / () = * . the remaining symbols< > ? : + # display the characters. hlue; press EXIT to go back without touch key will turn green when it is the command has been accepted.	The tex a b c j i l s t u	Name tt entered v d e f m n o v w x 1 0 A	vill ghi pqr yz



ARCHIVE function

From the main menu, press a key to access the **ARCHIVE** function.

From here the **Leak tests** can be carried out.

The Tests are listed by Customer and Date; if the Test is not associated with the Customer, only the Test date will be displayed. At the bottom of the screen (*touch keys*) press for to go back. Each line is a key; press on the line to select it (it will turn green) then, by pressing is the selected test will be displayed and then Printed or Deleted.

14:35 15 Nov 19	
Archive	\bigcirc
1 Day Month Year	AB CD
2 Customer Day Month Year	EF
3	GH
	— IJ
4	KL
5	MN
6	
7	51
	W/V
8	
	12

At the bottom of the screen (<i>touch</i> keys) press $\$ to go back; if the archived report is the requested report, it can be sent to the printer by pressing $\$, or deleted by pressing $\$.	5 15 Nov 19 🧰
A DELETED Report can no longer be retrieved.	7129 Leak 5 started 15 Nov 19 5 : 15:20 illizing: 15 min 5 : 45:00 dm3 27.32°C = 109.44 mbar 27.38°C = 109.41mbar 0.03mbar max= 0.1mbar
DATA LOGGER function From the main menu, press this key to access the DATA	
LOGGER function. From here 4 measured values Relative and Differential Pressure, Internal and External Temperature (<i>PUSH-PULL CONNECTOR FOR EXTERNAL PROBE</i>) CAN BE RECORDED. (connector with external probe connected to the input). At the bottom of the screen (<i>touch</i> keys), press to select the values to be recorded and the Sampling time. The recording is started by pressing O and is stopped by pressing D . Press Image: Press	15 Nov 19 DataLogger <
Image: The select the values to record will appear. Sampling: this is the time interval in seconds between two measurements. Press the line (<i>it is a key</i>), the touch keyboard will appear to allow the desired value to be entered. (as described in chapter MASTER DATA- KEYBOARD). Press Image: To go back to the previous screen.	O Select

CE516P / User Instructions

After selecting the Values to be recorded and the Sampling Time, the recording is started by pressing **O**.

If the instrument is not fitted with a microSD-Card, the warning pop-up window will appear.

The recording will still be started, but it will only be displayed on the graph. If the function is stopped or exited, the data will be deleted.



To insert the microSD-Card, first disconnect the USB cable (if in use), then open the cover of the battery compartment, remove the Battery or the Alkaline batteries. (also see the chapter INSTRUMENT DESCRIPTION - Opening/Closing the Battery Compartment).

After the recording is started, the graph of the values will appear in real time.

Press <--- to go back or <--- to stop the recording.

With the microSD-Card inserted for each recording cycle, a single file in CSV format, compatible with Excel, will be created.

The files will be saved in the "**datalogger**" folder and every file name will contain the DATA_ORA.csv (values separated by ;).

By opening the files with Excel, the data will appear in this format:

h:m:s	P1	P2	T Int	T Ext
15:05	0.68	-0.68	21.16	-999.00
15:05	0.75	-0.75	21.23	-999.00

By pressing the key a during the recording, the recording will be stopped as if the key a had been pressed.

The microSD-Card will contain 3 Folders:

datalogger	contains the CSV files generated by the DATALOGGER
factory	contains unusable system files
system	contains the files in the proprietary REGISTRY and ARCHIVE format.



IST-1516.CE01.01

CE516P / User Instructions

	SETTINGS function				
205	From the main menu, press the SETTINGS key. The lis	t of 14	:35 15 N	ov 19	
\sim	parameters that can be set up will appear, one page at a				
	time. Each line is a key; press on the line to make chang	les.	~		
Language	Allows the user to select one of the availa	able L	anguage:		
	languages.			•	
Date and T	Fime Sets the Date and Time.		ate and I	ime	
Saves Data	a on SD Saves the data on the SD-Card.	S	Saves Data on SD		
Loads Dat	a from SD Imports the data from the SD-Card.				
Printer Selection Allows the user to select the type of printer being used.		ed. L	Loads Data from SD		
Backlighting changes the brightness of the display.					
Factory NOT ACCESSIBLE, RESERVED TO FACTORY SETTINGS.			rinter Sele	ection	
Update FW	 Allows the instrument Firmware to be updated to more recent version. 	oa B	acklightir	ıg	
At the bot	to char of the screen (touch keys area) press	nge	$\langle \neg \rangle$		
page or	d to go back.				
		14	:35 15 N	ov 19	
			?	Settings	

SETTINGS - Language

Each line is a key; press the line to access the associated selection and edit or insert the requested value (only if editable).

In the example, after selecting "Language" the list of available languages will appear. Scroll through the list by swiping on the window, the press **OK** to confirm.

If the selection is as requested, it can be saved by pressing

SETTINGS - Save Data onto the SD

SETTINGS - Date and Time

It is used to transfer data from the internal memory of the instrument to the microSD-Card, where two files will be created (in proprietary format), one with the REGISTRY, the second one with the ARCHIVE data. If a micro SD-Card has not been inserted in the instrument, the warning pop-up window will appear.

as described above, but to save them the key 🔚 must be pressed.





Each time they are saved, the two files will be overwritten. The previous data will no longer be available.

Page 19/29

ស

 \sim



SETTINGS - Load Data onto the SD

It is used to transfer data from the microSD-Card onto the instrument internal memory.

The REGISTRY and the ARCHIVE data is stored in the "**system**" folder of the card. *It is advisable to make a copy of the card or in the PC by organizing the folders according to your requirements.*

If a SD-Card has not been inserted in the instrument, the warning popup window will be displayed, as shown above.

Every time the data is loaded onto the instrument, the previous data will be overwritten and will no longer be available.

SETTINGS - Select Printer

It is used to select the different types of *"Printer" according* to the printer available. Currently, the only printer available it **IR Tecnocontrol (ST338)**.

SETTINGS - Backlighting

It is used to select the level of brightness of the display and to adapt it to your requirements and to the brightness of the environment. After selecting the desired value, press **OK** to confirm it.

i

Please remember that high levels of backlighting will reduce the battery life.

SETTINGS - Update Firmware

Allows the instrument Firmware to be updated.

- 1-Download the zipped file from our site (.zip).
- 2-After downloading the file onto the PC, unzip the file.
- 3-Install the drivers contained in the downloaded file.
- 4-Then follow the instructions that will appear on the PC.

The USB-C connector must be inserted in the instrument socket with the metal smooth part upwards (the other side has a joining sign). If the PC does not acknowledge that a USB port is connected, turn the connector.



Registry.dbk
 Registry_backup.dbk
 Archive.dbk
 Archive_backup.dbk

The _backup files are copies of the main files.



The FIRMWARE updates can be downloaded from our site at the product page: <u>ST200PT</u> (Link to product).



IST-1516.CE01.01

CE516P / User Instructions

Page 21/29



- 5- Connect the PC to the instrument by using a USB cable supplied and select "Load file"
- 6- Search the downloaded and unzipped file (.hex) in the PC, select it (click on the file) and select "Open"

U ST200 Updater - V1.0.0.0	U ST200 Updater - V1.0.0.0
Collegare lo strumento con la porta USB	Collegare lo strumento con la porta USB
C:\ST200 UPDATER\ST200PTNewTouch.hex Load file Start update	C:\ST200 UPDATER\ST200PTNewTouch.hex Load file Start update
Ready	Flash downloading

- 7- Start updating the instrument by selecting 8- Wait until the update has been loaded. Once "Start update"
- completed, the bar will be full.
- 9- The instrument will be automatically restarted, indicating that the update has been correctly loaded. Close the screen on the PC and disconnect the USB port.

IST-1516.CE01.01

CE516P / User Instructions

USING THE PRINTER

LED: It indicates the operating status of the printer.

"MODE" KEY: on/ off and paper feeding.

- to switch the printer on, press and release the key; the LED will remain lit.
- to feed the paper hold down the key.
- to switch the printer off press and release the key; the LED will go off.

THERMAL PAPER LOADING:

• <u>to replace the paper</u> open the paper roll compartment by lifting the clear window in the point shown.

Take out the used roll and, if necessary, use the Mode Key to remove the residual paper from the printer. Make sure that there are no residues of paper. Then insert the new paper roll by pushing the edge through the feeding slot by using the **Mode** key to push the paper forward.





Remove the cover of the battery compartment located on the back of the printer.

Remove the 4 alkaline batteries and insert the new ones ensuring their correct polarity.





For a longer printing time, we recommend using goof quality alkaline batteries.

Remove the batteries if the printer will not be used for a long time.

Aligning the printer IR Port with the instrument IR Port to ensure the correct printing data transfer.



<u>UNI 7129</u> – Gas systems for domestic use and similar systems supplied by mains gas - Design, installation and commissioning - Part 1: Indoor system.

This standard is applied to domestic systems and similar systems using fuel gases (family 1, 2, and 3 in accordance with EN 437) supplied by the mains gas (UNI 9165 and UNI 10682). Criteria for building and renovating full or partial indoor systems, connected to equipment with a maximum heat output not exceeding 35 kW.

The leak test must be carried out before connecting the system to the gas meter, before connecting the equipment and before it is commissioned. In addition, if a part of the system is not visible (ducted, below the ground etc.) the leak test must be carried out before covering these section of pipes.

<u>UNI 11137</u> - Gas systems for domestic use and similar systems. General prescriptions and requirements for gas families 2 and 3. Guidelines for inspecting and resetting the gas tightness of indoor systems.

This standard is applied to domestic systems or to similar systems to be enabled, started or restarted, supplied with family 2 gases (natural Gas) and family 3 gases (LPG) specified by standard UNI EN 437 and included in the field of application of standards UNI 7129, UNI 7131, UNI 8723 and UNI 10738.

The lead test can be carried out in two different ways. For systems with volume <18dm³, the PRELIMINARY TEST can be carried out only with GAS at operating pressure. Or the INDIRECT METHOD can be used.

<u>UNI 11528</u> - Gas systems with heat output exceeding 35 kW - Design, installation and commissioning.

The standard set out the criteria for the design, installation and commissioning of commercial systems (family 1, 2 and 3) or of battery or cascade installed systems with a total heat output higher than 35 kW. It is also applied to the renovation of commercial systems or of parts of such systems. It is not applied to gas systems installed in industrial processing cycles and in systems covered by standard UNI 8723.

The leak test must be carried out for non-domestic systems (connected to single pieces of equipment with a heat output > 35 kW, or to battery or cascade installed systems with a total heat output > 35 kW)

UNI 7129 - Gas systems for domestic use

CARRY OUT THE LEAK TEST (WITH AIR):

NEW GAS FIRED DOMESTIC SYSTEM WITH A HEAT OUTPUT < 35 KW

1. Make sure that the system is closed (gas shutoff valve fitted upstream of the meter and shutoff valves towards each piece of equipment).

Connect the **ST200PT** to any point of the system.

As shown in the chapter GAS LEAK TEST, the values are preset in accordance with the standard but, if necessary, they can be changed.

Parameter	Preset value	Notes on parameter editing
System volume	Automatic	can be set to: Automatic or Manual
Pressurizing	Automatic	can be set to: Automatic or Manual
Test pressure	120 mbar	Settable from 100 to 150 mbar
Stabilizing	15 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes
Test time	5 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes
Test repetitions	1	Settable from 1 to 3

2. On the ST200PT, start the leak test.

- 3. Wait until the instrument conveys air to the system, stabilizes the pressure and completes the test for the time set.
- 4. At the end, the instrument will calculate and display the test result (PASSED or FAILED). Print and/or save the test

Table 1 - UNI 7129 Limits of acceptability.				
System internal volume	Test time	Allowable pressure drop		
$Vol \leq 100 \ dm^3$	5 minutes	DPmax=0.5 mbar		
100 < Vol ≤ 250 dm³	5 minutes	DPmax=0.2 mbar		
Vol > 250 dm ³	5 minutes	DPmax=0.1 mbar		

The systems subjected to maintenance for repairs or changes must be rechecked by repeating the Leak Test as required by standard UNI 7129-1.

UNI 11137 - GAS SYSTEM

For this standard, the instrument is able to carry out the **PRELIMINARY TEST with GAS** and the **TEST** with the INDIRECT METHOD (with AIR or GAS).

Table 2 - UNI 11137 Gas families and pressures to be used.			
Family 1 gas	Reference pressure for test with gas (p_g)	1 000 Pa	
(manufactured Gas)	Test pressure with air (p _a)	5 000 Pa	
Family 2 gas	Reference pressure for test with gas (pg)	2 200 Pa	
(Natural Gas)	Test pressure with air (p _a)	5 000 Pa	
Family 3 gas	Reference pressure for test with gas (pg)	3 000 Pa	
(LPG)	Test pressure with air (p _a)	5 000 Pa	

CARRY OUT THE PRELIMINARY TEST (WITH GAS):

SYSTEM TO BE CHECKED WITH VOLUME <18dm³ BY USING GAS AT ITS OPERATING PRESSURE.

- 1. The system volume will be automatically calculated by the instrument, but it is essential to know beforehand if it is < 18 dm³.
- 2. Open and close the windows to ventilate the environments.
- 3. Close the main gas shutoff valve (located upstream of the meter, if it is included in the test, or downstream, if it is not included in the test).
- 4. Connect the **ST200PT** to the system in an accessible point and select the **Gas Family** being used and if the test will include (YES) or not (NO) the **Shutoff valve** (main gas valve).

i As shown in the chapter GAS LEAK TEST, the values are preset in accordance with the standard but, if necessary, they can be changed.

Parameter	Preset value	Notes on parameter editing
System volume	Automatic	can be set to: Automatic or Manual
Gas Family	Natural gas - Family 2	Settable: Fam. 1 (Town gas), Fam. 2 (natural gas) or Fam. 3 (LPG).
Test time	1 min	Automatic (Fam. 1 and 2 = 1 min, Fam.3 = 2.5 min).
Stabilizing	15 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes
Test repetitions	1	Settable from 1 to 3
Shut-off Device Test	YES	can be set to: YES or NO

- 5. Re-open the meter valve to convey gas in the system until the pressure in the pipes is stabilized, as shown above in Table 2 according to the Gas "Family" being used. Then close the main gas shutoff valve (located upstream of the meter, if it is included in the test, or downstream, if it is not included in the test).
- 6. On the ST200PT, start the leak test.
- 7. Wait until the device pressurizes the system, stabilizes the pressure and completes the test for the time set.
- 8. At the end, the instrument will calculate and display the test result (PASSED or FAILED). Print and/or save the test.

Table 3 - UNI 11137 Limits of acceptability.				
System internal volume	Test time	Allowable pressure drop		
$Vol \leq 18 \ dm^3$	15 minutes	DPmax=0.5 mbar		

CARRY OUT THE TEST WITH THE INDIRECT METHOD (WITH AIR OR GAS):

SYSTEM TO BE CHECKED OR RESTARTED BY USING AIR.

- 1. Close the main gas shutoff valve (located upstream of the meter, if it is included in the test, or downstream, if it is not included in the test).
- 2. Connect the **ST200PT** to the system in any accessible point and select the *Gas Family* being used, the *Type of Test* if it will be carried out with Gas or Air and if the test will include the *Shutoff valve* (*main gas valve*) (*YES*) or not (*NO*).

i As shown in the chapter GAS LEAK TEST, the values are preset in accordance with the standard but, if necessary, they can be changed.

Parameter	Preset value	Notes on parameter editing
System volume	Automatic	can be set to: Automatic or Manual
Pressurizing	Automatic	can be set to: Automatic or Manual
Gas Family	Natural gas - Family 2	Settable: Fam. 1 (Town gas), Fam. 2 (natural gas) or Fam. 3 (LPG).
Test Type	Gas	can be set to: Gas or Air
Stabilizing	15 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes
Test time	1 min	Automatic (Fam. 1 and 2 = 1 min, Fam. 3 = 2.5 min)
Test repetitions	3	Settable from 1 to 3
Shut-off Device Test	YES	can be set to: YES or NO

1. On the ST200PT, start the leak test.

- 2. Wait until the instrument pressurizes the system, stabilizes the pressure and completes the test for the time set.
- 3. At the end, the instrument will calculate and display the test result (PASSED or FAILED). Print and/or save the test.

Table 4 - UNI 11137 Limits of acceptability.				
Family	Leak			Test time
1 and 2	Q _t ≤ 1 dm³/h	$1 < Q_t \le 5 \text{ dm}^3/h$	Q _t > 5 dm³/h	1 minute
3 (LPG)	Q _t ≤ 0.4 dm³/h	$0,4 < Q_t \le 2 \text{ dm}^3/h$	Q _t > 2 dm ³ /h	2.5 minutes
	Standard compliant system	The system is usable but must be subjected to maintenance within 30 days.	Closing the system	

The systems subjected to maintenance for repairs or changes must be rechecked by repeating the Leak Test as required by standard UNI 7129-1.

UNI 11528 - GAS SYSTEM

Type of system	Test pressure	Test time
6th type non-underground	1 bar	4 hours
6th type underground	1 bar	24 hours
7th type non-underground	0.1 bar	30 minutes
7th type underground	1 bar	30 minutes

CARRY OUT THE LEAK TEST (WITH AIR):

COMMERCIAL SYSTEMS WITH A SINGLE, BATTERY OR CASCADE GAS FIRED EQUIPMENT WITH A TOTAL HEAT OUTPUT > 35 KW.

- 1. Make sure that the system is closed.
- 2. Connect the **ST200PT** to the system in an accessible point and select the System Type being used "System Type.

i As shown in the chapter GAS LEAK TEST, the values are preset in accordance with the standard but, if necessary, they can be changed.

Parameter	Preset value	Notes on parameter editing
System type	6th type non- underground	can be set to: 6th type non-underground,6th type underground, 7th type non-underground, 7th type underground
Stabilizing	15 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes
Test time	4 hours	Automatic (value based on the selected Type)
Test pressure	1 bar	Automatic (value based on the selected Type)

- 3. On the ST200PT, start the leak test.
- 4. Blow air in the system by using a compressor or a manual pump; the instrument will wait until the pressure is stabilized, then it will complete the test for the time set.



When the air is blown in the system with a compressor, increase the pressure slowly and gradually to avoid too much strain on the instrument pressure sensor. **Do not exceed the maximum pressure values of the instrument.**

5. At the end, the instrument will calculate and display the test result (PASSED or FAILED). Print and/or save the test.

Table 5 - UNI 11528 Limits of acceptability.

No pressure drop allowed

HIGH PRESSURE TEST

CARRY OUT THE LEAK TEST (WITH AIR):

DIFFERENT SYSTEMS WHERE A LEAK TEST IS REQUIRED.

1. Connect the **ST200PT** to the system in an accessible point and select the available parameters.

As shown in the chapter GAS LEAK TEST, the values are preset in accordance with the standard, but can all be changed according to the type of test to be carried out.

2. Pressurize the system up to the value

Parameter	Preset value	Notes on parameter editing
Test pressure	5000 mbar	Can be set from 1000 to 5500 mbar
Stabilizing	15 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes
Test time	2.5 min	Can be set to 1, 2, 2.5, 3, 5, 10, 15, 20, 30, 45, 60, 120, 240 and 1440 minutes

3. On the ST200PT, start the leak test.

- 4. The instrument carries out the Reset operation (Resetting), then the system must be pressurized up to the set value.
- 5. Blow air in the system by using a compressor or a manual pump; the instrument will wait until the pressure is stabilized, then it will complete the test for the time set.
- 6. At the end of the test, the instrument will show the test results. The operator must assess whether to consider the test as PASSED or FAILED and act accordingly. Print and/or save the test.

Appendix

TECHNICAL SPECIFICATIONS			
Power Supply			
Power supply / Battery charger (External)	Input AC 100 to 240 / 50 to 60Hz Output 5VCC / 2A		
Interchangeable and rechargeable battery, also independently from the instrument.	Li-Ion 3.7 V / 5000 mAh		
Battery life ⁽¹⁾	From 6 to 14 hours according to the type of tests carried out.		
Charging time	Approximately 4 hours		
Alkaline batteries (<i>in alternative to the Mair Battery</i>)	¹ 4 off Alkaline AA batteries (not <i>included</i>)		
Power cable	USB cable with USB-C connector		
Instrument features			
Display	Backlit colour 240x 320 pixel "Touch Screen" display.		
Keyboard	ON/OFF key + keys built in the resistive "Touch" resistive display.		
Audible / other alarms	Internal buzzer / Vibration		
Built-in pump	Pressurizing capacity up to 600 mbar		
Support	Built-in magnets		
External Probe Connection (Optional)	Push-Pull connector		
Pressure Connection	2 off male connectors (quick coupling DN-5)		
Measurement specifications			
LOW pressure range	from -50 to 600 mbar		
LOW pressure resolution	0.1 mbar		
HIGH Pressure range	from -0.6 to 6 bar		
HIGH Pressure range Resolution	0.1 mbar		
Differential Pressure	± 1 bar		
Differential Pressure Resolution	0.1 mbar		
System Volume Calculation	Integrated in dm ³		
Internal temperature	+5 to +40 °C		
Temperature Resolution	0.1 °C		
Data and interface management			
Built-in memory	Flash		
MicroSD-Card (not included)	SD and SDHC max 32Gb / SDXC FAT32 formatted max 32Gb.		
Supported printer (Optional)	Infrared ST338 (only supplied with mod.ST200PT/S)		
Built-in data connection	Type C USB port		
Data connection (Optional board)	Bluetooth + Wi-fi		
Operating Conditions			
Operating temperature/Humidity ⁽²⁾	+5 to +40 °C / 5 to 95% rh		
Storage Temperature/Humidity ⁽²⁾	+20 to +50 °C / 5 to 95% rh		
Dimensions and Protection Rating	210 x 80 x 43 mm IP40		
Instrument weight ⁽¹⁾	approx. 500 g		
Case weight (complete with accessories)	approx. 2 g		
(1) The battery life is calculated within a minimur	n and maximum range, taking into consideration that, according to the type c		

The battery life is calculated within a minimum and maximum range, taking into consideration that, according to the type of tests carried out, the power required can vary greatly, specially when the built-in pump is used. In addition, the battery like is also affected by the display level of back lighting and potential effects such as ageing, temperature etc.
 With the Li-Ion battery in the instrument

i

The Serial Number is printed both on the Test Label located on the back of the instrument and displayed on screen with the Firmware, Hardware version (data visible when the instrument is switched on and on the main screens).